



Occhio

tavolo NV


Montageanleitung
mounting instructions

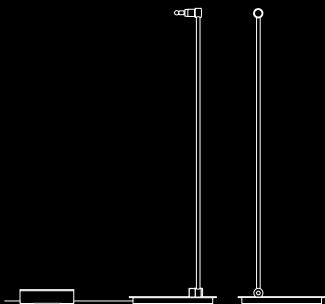

Occhio

tavolo NV

Montageanleitung S.2
mounting instructions p. 27

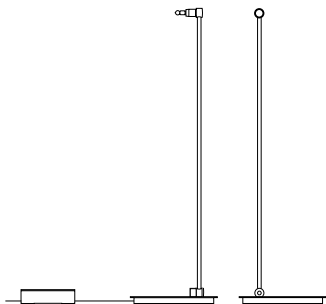



Die Montage von Elektrokomponenten darf nur von qualifiziertem Fachpersonal durchgeführt werden!
Vor den Arbeiten an der Leuchte diese unbedingt vom Netz trennen!



Den Sicherheitsabstand zu brennbaren Objekten einhalten!



Vorsicht, Verbrennungsgefahr!
Niemals den heißen Reflektorkopf, nur den Leuchtenarm im mittleren oder unteren Bereich berühren!
Vor dem Wechsel des Reflektorkopfes und des Leuchtmittels, Leuchte ausschalten und abkühlen lassen.

Reparaturarbeiten dürfen nur von autorisiertem Fachpersonal oder dem Hersteller durchgeführt werden.



Hinweise zum optionalen Sensorpad:
Der Kunststoff der Antirutsch-Fläche kann in seltenen Fällen mit der Oberfläche von Möbeln reagieren (insbesondere beim Einsatz von Putz- oder Pflegemitteln).

Der Hersteller empfiehlt im Zweifelsfall das Occhio sensorpad mit einem Filz oder ähnlichem zu unterlegen.
Eine Haftung des Herstellers für Sachschäden wird ausgeschlossen.


Produktbeschreibung

Die Leuchte Occhio tavolo NV ist eine Niedervolt-Halogen-Leuchte der Schutzklasse 2.


Die Leuchte ist mit dem Occhio controller, optional zusätzlich mit dem Occhio sensorpad ausgerüstet.

Inhalt


- 3 Produktbeschreibung
- 5 Aufbau
- 6 Ausrichtung
- 7 Einzelteile
- 8 Montage Ausrichtung rechts
- 11 Montage Ausrichtung links
- 16 Ausrichten der Leuchte
- 17 Leuchtmittel einsetzen
- 18 Reflektorkopf aufsetzen/wechseln
- 18 Leuchtmittel wechseln
- 19 An- und Ausschalten/Dimmen
- 20 Occhio controller Setup
- 22 Sensordimmung
- 23 Pflege
- 23 Info & Kontakt
- 24 Technische Daten
- 25 Technische Daten tavolo NV
- 25 Leuchtmittel

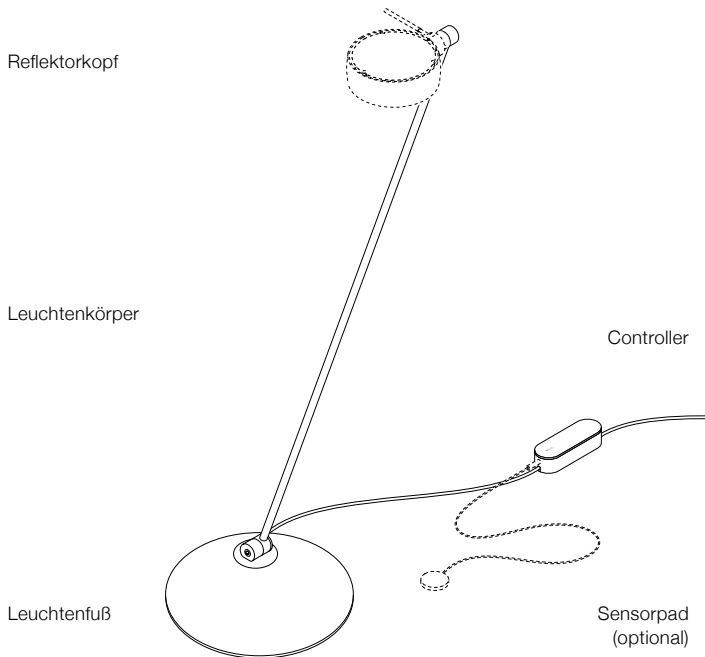


Ausrichtung

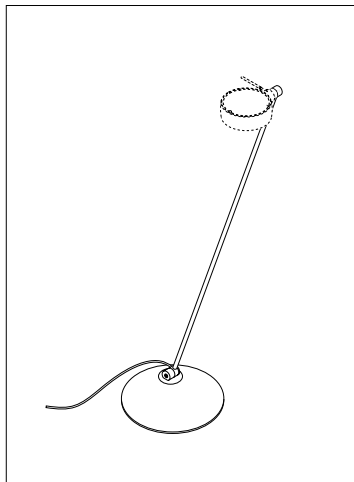

Occhio tavolo NV ist werkseitig montagevorbereitet für die Standardausrichtung nach rechts.

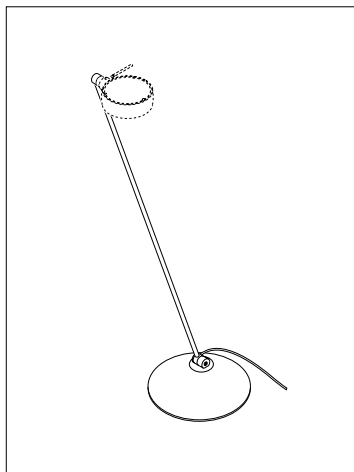


Falls gewünscht, kann die Ausrichtung nachträglich nach links geändert werden.

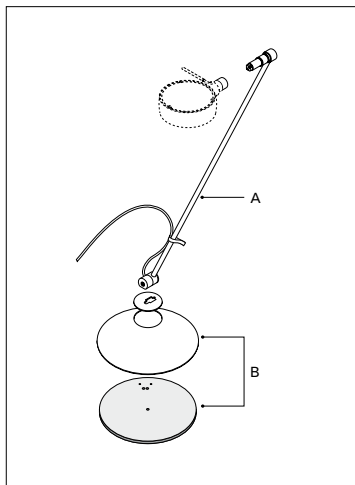

Occhio tavolo NV besteht aus folgenden Einzelteilen:


A: Leuchtenkörper incl. Occhio controller, optional incl. Occhio sensorpad, Reflektorkopf

B: Leuchtenfuß, bestehend aus Grundplatte und Deckplatte mit Intarsie

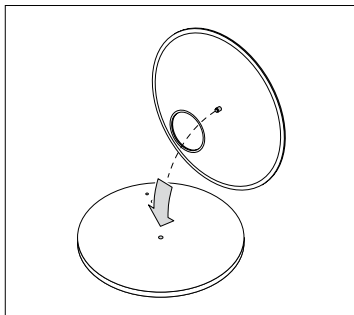


Achtung!
Vor der Montage alle stromführenden Leitungen vom Stromnetz trennen!

Die magnethaftende Deckplatte mit der Zentrierhilfe auf die Grundplatte legen.

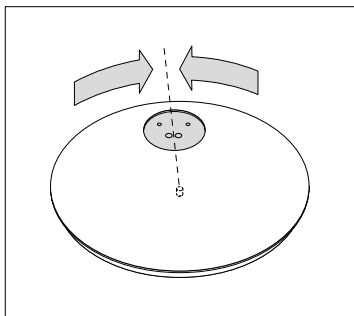


Deckplatte auf der Grundplatte so drehen, dass der Ausschnitt für die Intarsie symmetrisch über den Montagebohrungen liegt.

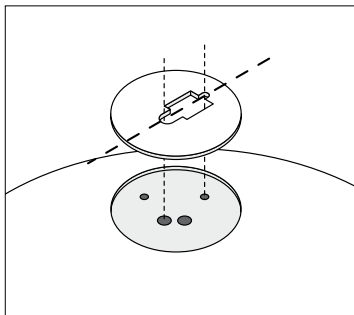


Intarsie in die Aussparung einlegen

Deckplatte wie abgebildet ausrichten, dass die Aussparungen der Intarsie genau über den Bohrungen der Grundplatte liegen.

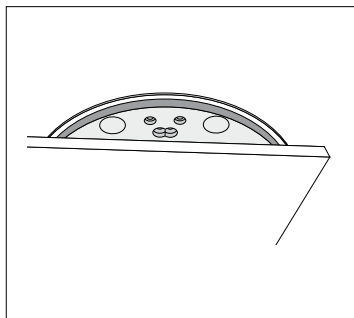

Montage bei starrem Fuß


Für die Leuchtenmontage den Leuchtenfuß so auf den Tisch legen, dass die Bohrungen für die Montage von unten zugänglich bleiben.

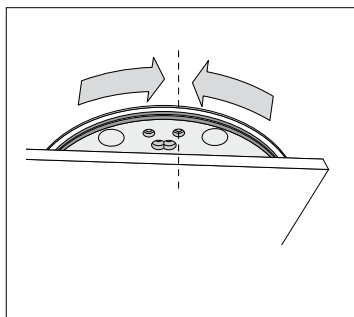


Montage bei drehbarem Fuß

Für die Leuchtenmontage den Leuchtenfuß so auf den Tisch legen, dass die Bohrungen für die Montage von unten zugänglich bleiben.


Drehbare Grundplatte so ausrichten, dass die Bohrungen übereinander liegen.

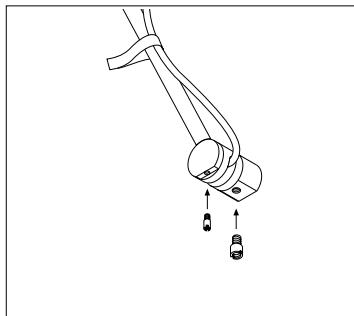

Beiliegende Gewindehülsen mit Schraubendreher in das Gelenk einschrauben und gut festziehen.

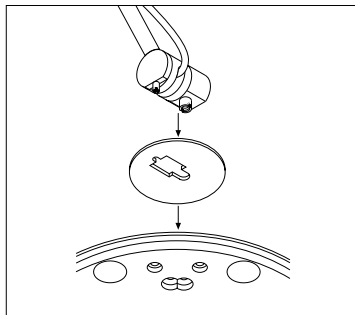


Leuchte mit beiden Gewindehülsen durch die Aussparungen der Intarsie in die Bohrungen der Grundplatte einstecken.

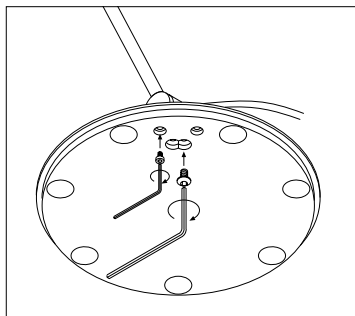


Schrauben Linsenkopf-Inbus M5 und Zylinderkopf-Inbus M3 einschrauben und gut festziehen.

Klebeband der Kabelfixierung entfernen.

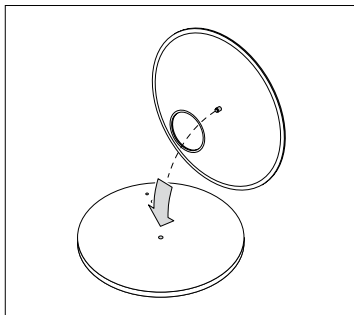


Achtung!
Vor der Montage alle stromführenden Leitungen vom Stromnetz trennen!

Die magnethaftende Deckplatte mit der Zentrierhilfe auf die Grundplatte legen.

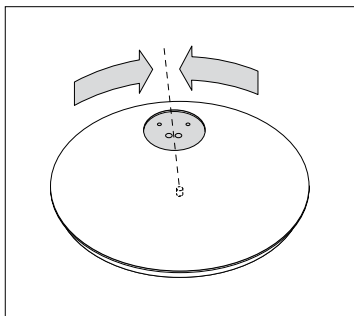


Deckplatte auf der Grundplatte so drehen, dass der Ausschnitt für die Intarsie symmetrisch über den Montagebohrungen liegt.

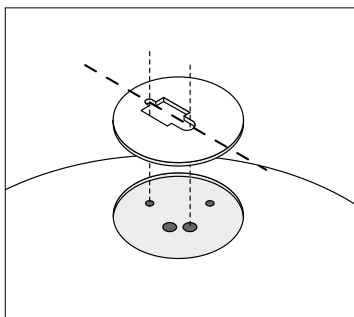


Intarsie in die Aussparung einlegen

Deckplatte wie abgebildet ausrichten, dass die Aussparungen der Intarsie genau über den Bohrungen der Grundplatte liegen.

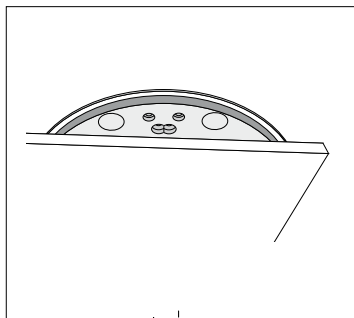


Montage bei starrem Fuß

Für die Leuchtenmontage den Leuchtenfuß so auf den Tisch legen, dass die Bohrungen für die Montage von unten zugänglich bleiben.

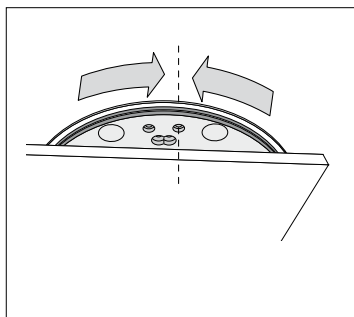


Montage bei drehbarem Fuß

Für die Leuchtenmontage den Leuchtenfuß so auf den Tisch legen, dass die Bohrungen für die Montage von unten zugänglich bleiben.
Drehbare Grundplatte so ausrichten, dass die Bohrungen übereinander liegen.

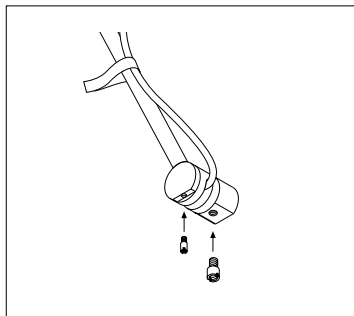


Beiliegende Gewindehülsen mit Schraubendreher in das Gelenk einschrauben und gut festziehen.

Montage Ausrichtung links


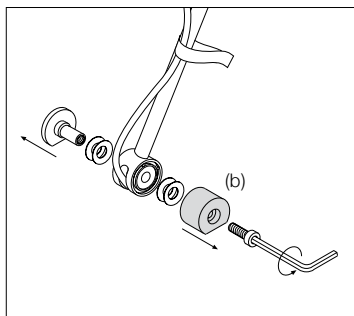


Gelenk des Leuchtenarms wie gezeigt mit Inbusschlüssel auseinander schrauben.

Anschlagpins im Befestigungszyylinder (b) nach Schema ändern.

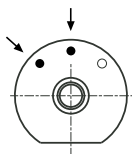


Ausrichtung rechts
(Auslieferungszustand)

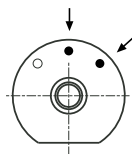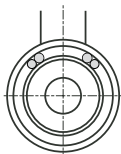

Ausrichtung links

● eingesteckter Pin


Kabel des Leuchtenkörpers auf andere Seite führen.




Version rechts
(Auslieferungszustand)




Version links

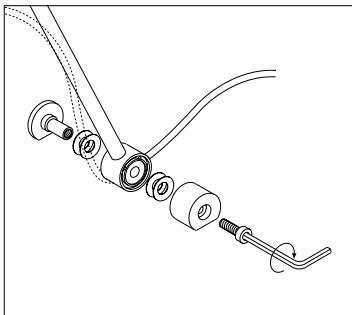


Gelenk nach Schema zusammensetzen und verschrauben, ...

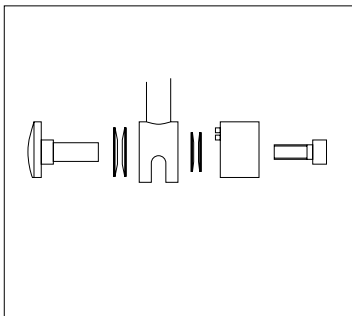

... dabei auf die richtige Anordnung der Tellerfedern achten.

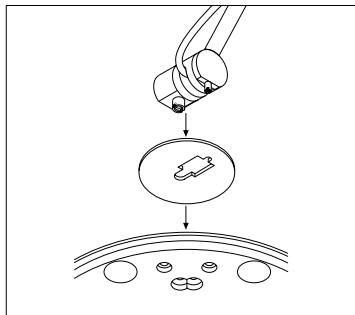


Leuchte mit beiden Gewindehülsen durch die Aussparungen der Intarsie in die Bohrungen der Grundplatte einstecken.

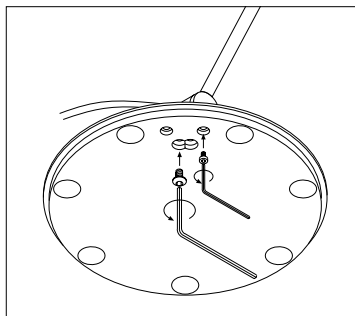

Schrauben Linsenkopf-Inbus M5 und Zylinderkopf-Inbus M3 einschrauben und gut festziehen.


Klebeband der Kabelfixierung entfernen.

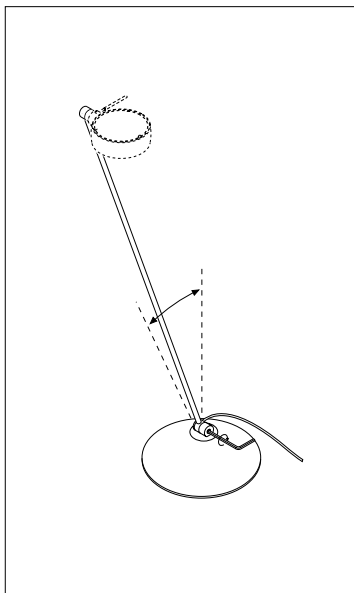

Der Leuchtenarm lässt sich aus senkrechter Position nach vorne und hinten schwenken. Der Anschlag ist begrenzt.

Die Beweglichkeit kann mit dem beiliegenden Inbusschlüssel an der Gelenkschraube eingestellt werden.


Schwenkbereich: ca. 45°

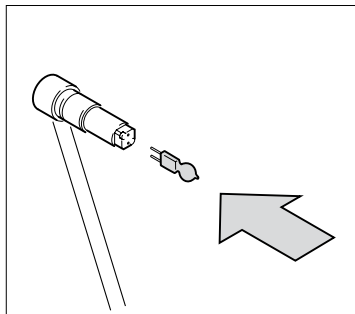

Achtung!
Vor der Montage alle stromführenden
Leitungen vom Stromnetz trennen!
Reflektorköpfe abkühlen lassen!

Niedervolthalogen Leuchtmittel in die Gy6.35 Stiftfassung setzen.

Den Glaskolben des Leuchtmittels nur mit einem weichen Tuch, nicht mit der bloßen Hand anfassen.

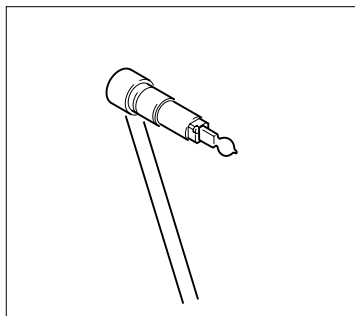

Fingerabdrücke auf dem Leuchtmittel vor dem Einschalten der Leuchte mit einem weichen Tuch abwischen.

Reflektorkopf aufsetzen/wechseln




Die Montage des Reflektorkopfes wird in der getrennt beiliegenden Anleitung zum entsprechenden Reflektorkopf beschrieben.

Leuchtmittel wechseln



Das Wechseln des Leuchtmittels wird in der getrennt beiliegenden Anleitung zum entsprechenden Reflektorkopf beschrieben.








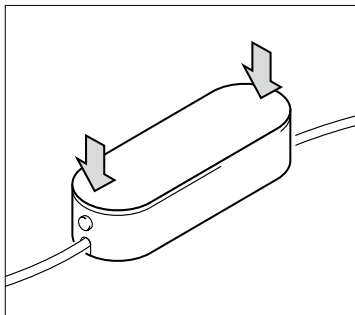


Occhio controller im Auslieferungszustand: Schalt- und Dimmfunktion über Tastwippe.

Kurzes Betätigen der Tastwippe schaltet die Leuchte ein und aus.

Längeres Betätigen der Tastwippe dimmt die Leuchte stufenlos auf und ab.

Eine Übersicht über die unterschiedlichen Setup-Optionen des Occhio controllers finden Sie auf den folgenden Seiten.

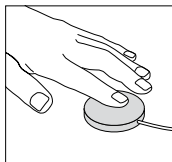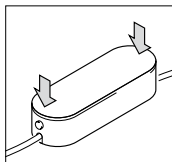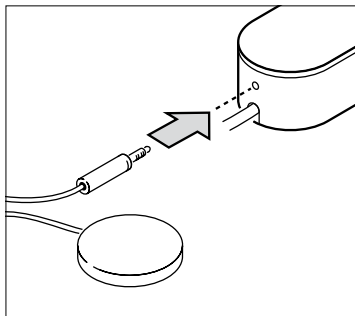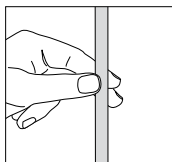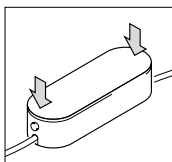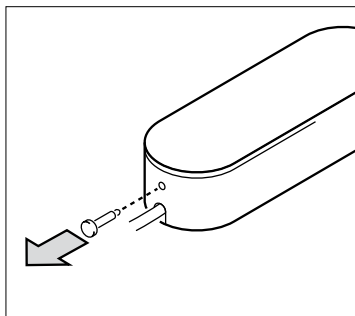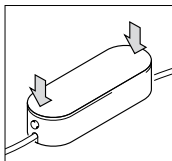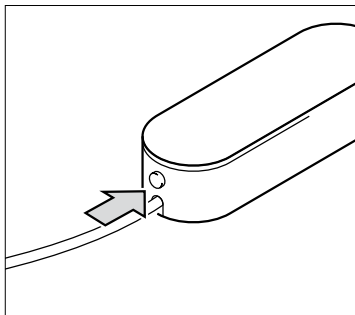

Controller mit eingestecktem Pin:

Schalt- und Dimmfunktion nur über Tastwippe.

Kurzes Betätigen der Tastwippe schaltet die Leuchte ein und aus.

Längeres Betätigen der Tastwippe dimmt die Leuchte stufenlos auf und ab.

Um Störungen der Elektronik zu vermeiden: Vor Entfernen des Pins oder des Sensorpads, Leuchte vom Stromnetz trennen!

Controller mit entferntem Pin:

Schalt- und Dimmfunktion über Tastwippe und durch Berühren der Metalloberfläche am Leuchtenkörper.

Controller mit eingestecktem Sensorpad:

Schalt- und Dimmfunktion über Tastwippe und durch Berühren des Sensorpads.

Der Kunststoff der Anti-rutsch-Fläche kann in seltenen Fällen mit der Oberfläche von Möbeln reagieren – insbesondere beim Einsatz von Putz- oder Pflegemitteln (siehe Sicherheitshinweise).

Kurzes Berühren des Leuchtenkörpers oder Betätigen der Tastwippe schaltet die Leuchte ein und aus.

Längeres Berühren des Leuchtenkörpers oder Betätigen der Tastwippe dimmt die Leuchte stufenlos auf und ab.



Vorsicht! Niemals den heißen Reflektorkopf, nur den Leuchtenstab im mittleren oder unteren Bereich berühren!

Kurzes Berühren des Sensorpads oder Betätigen der Tastwippe schaltet die Leuchte ein und aus.

Längeres Berühren des Sensorpads oder Betätigen der Tastwippe dimmt die Leuchte stufenlos auf und ab.

Die Funktionsweise des Sensordimmers kann unter Umständen durch Spannungsschwankungen, störende Netzfrequenzen in der Stromversorgung oder zu gute Isolierung des Anwenders gegenüber dem Boden beeinträchtigt sein.

Mögliche Abhilfe:

- Netzstecker um 180° drehen und in die Steckdose einstecken.
- Sensorfunktion durch Einsetzen des Kunststoffpins deaktivieren und Leuchte über den Controller steuern.

Pflege

Zur Reinigung der Metall- als auch der Glasteile der Leuchte empfehlen wir die Verwendung eines Glasreinigers.

Leuchte nur im abgekühlten Zustand reinigen!

Info & Kontakt

Weitere Fragen beantwortet gerne Ihr Occhio Fachhändler

www.occhio.com

info@occhio.com

Technische Daten

Artikelbezeichnung:
Occhio tavolo NV 60/80
incl. Occhio controller

optional incl. Occhio sensorpad

Armlänge: 60/80 cm
Fußdurchmesser: 24 cm

Niedervolt-Halogen Leuchtmittel:
12 V Halogen, matt/klar
Sockel Gy6.35
Lieferung mit 60 W
Niedervolt-Halogen IRC Leuchtmittel

Leuchtmittel-Leistungen:
max. 60 W

IP20  CE

Technische Daten tavolo NV

tavolo 80 NV	max. 75 W NV-Halogen	matt schwarz	7T 75 00 MS F
	Gy 6.35, Occhio controller	matt chrom	7T 75 00 MM F
	NV (Tastdimmer)	chrom	7T 75 00 CC F
	inkl. Leuchtmittel 65 W IRC,	bianco	7T 75 00 CB F
	Höhe 80 cm	nero	7T 75 00 CN F

Version mit drehbarem Fuß	matt schwarz	7T 75 00 MS T
	matt chrom	7T 75 00 MM T
	chrom	7T 75 00 CC T
	bianco	7T 75 00 CB T
	nero	7T 75 00 CN T

tavolo 60 NV	max. 75 W NV-Halogen	matt schwarz	7T 74 00 MS F
	Gy 6.35, Occhio controller	matt chrom	7T 74 00 MM F
	NV (Tastdimmer)	chrom	7T 74 00 CC F
	inkl. Leuchtmittel 65 W IRC,	bianco	7T 74 00 CB F
	Höhe 125 cm	nero	7T 74 00 CN F

Version mit drehbarem Fuß	matt schwarz	7T 74 00 MS T
	matt chrom	7T 74 00 MM T
	chrom	7T 74 00 CC T
	bianco	7T 74 00 CB T
	nero	7T 74 00 CN T

Occhio sensorpad (optional)	ansteckbar an Occhio controller NV, ø 45 mm, Kabellänge 180 cm	matt chrom	7L 70 01 M
		chrom	7L 70 01 C


Leuchtmittel

Niedervolt-Halogen ECO Gy6.35		50 W	5G 00 50 C
		60 W	5G 00 60 C

Occhio


tavolo NV

mounting instructions

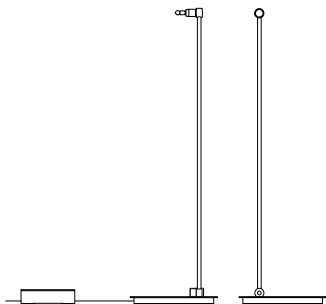



The assembly and installation of electrical components must be carried out only by qualified personnel. Before working on the lamp, always disconnect it from the mains.



Maintain the minimum safety distance from flammable materials.



Caution, risk of burns. Never touch the reflector head while it is hot. Only handle the middle or bottom part of the lamp stem. Before changing the reflector head and the bulb, switch off the lamp and allow it to cool down.

Repairs must be carried out only by authorised, qualified personnel or the manufacturer.



Instructions for the optional sensor pad:

The plastic used for the non-slip surface can, in rare cases, react with the surfaces of furniture (in particular when cleaning agents or care products are used).

If in doubt, the manufacturer recommends placing a piece of felt or a similar material underneath the Occhio sensor pad.


The manufacturer shall not be held liable for property damage.

Product description

The Occhio tavolo NV lamp is a safety-class 2 low-voltage halogen lamp. The lamp is equipped with the Occhio controller and, as an additional option, the Occhio sensor pad.


Contents

29	Product description
31	Configuration
32	Alignment
33	Components
34	Assembly, right alignment
37	Assembly, left alignment
42	Adjusting the lamp
43	Inserting the bulb
44	Fitting/replacing the reflector head
44	Replacing the bulb
45	Switching on and off/dimming
46	Occhio controller setup
48	Sensor dimming
49	Care
49	Information & contact
50	Technical data
51	Technical data, tavolo NV
51	Bulb

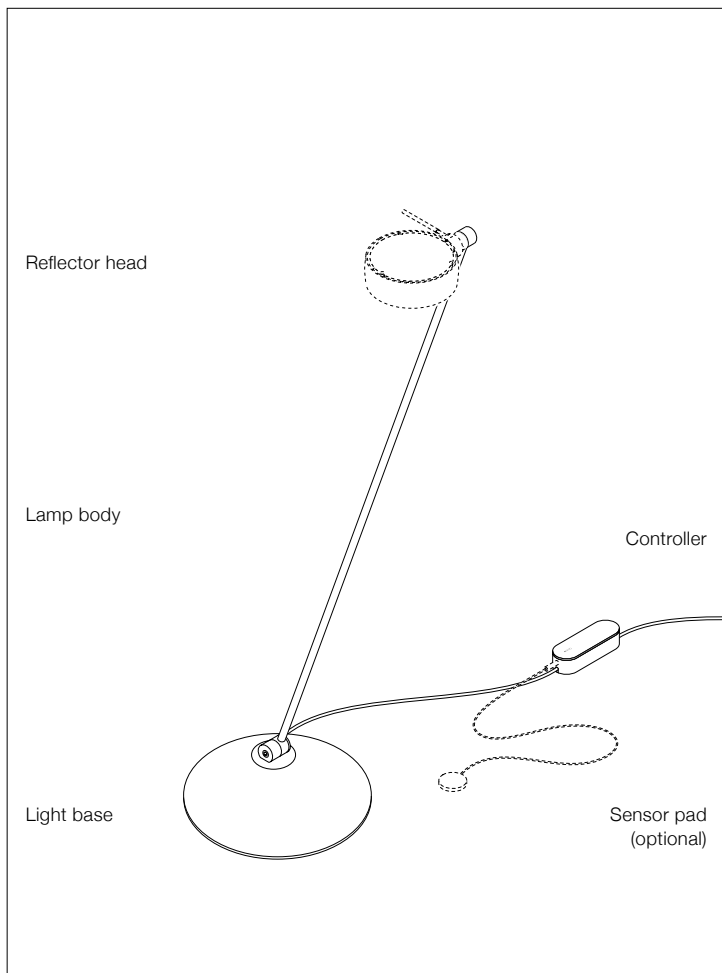


Alignment


Occhio tavolo NV is factory-made for assembly in the standard right alignment.

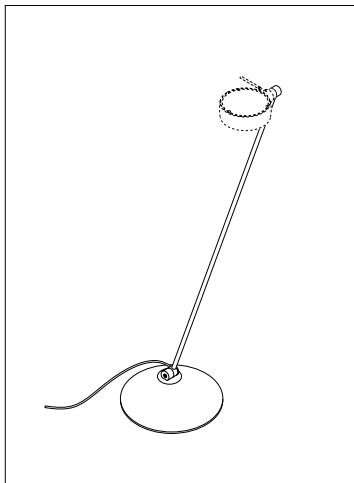

If desired, the alignment can later be changed to left.

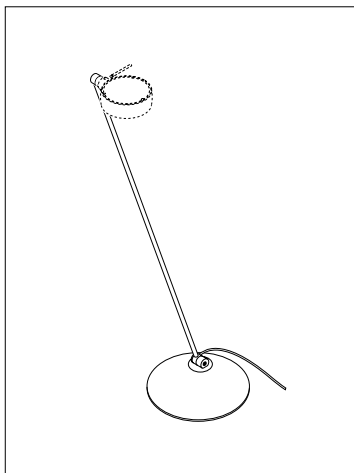


Components

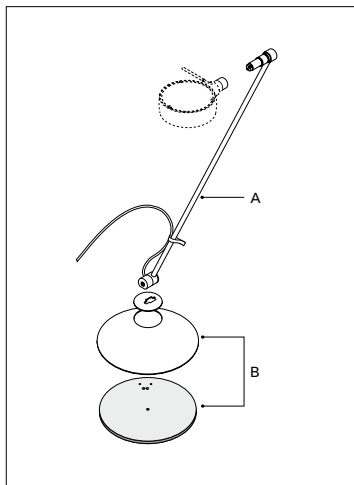

Occhio tavolo NV consists of the following components:

A: Lamp body incl. Occhio controller, optionally incl. Occhio sensor pad, Reflector head


B: Lamp base, consisting of base plate and cover plate with inlay

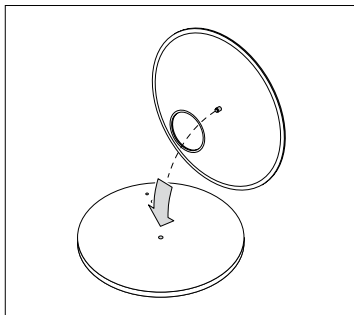


Caution

Before fitting, disconnect all current-carrying lines from the mains supply.

Lay the magnetic cover plate on the base plate using the centring aid.

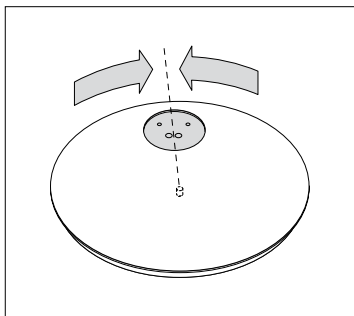


Turn the cover plate on the base plate until the cut-out for the inlay is positioned symmetrically over the assembly holes.

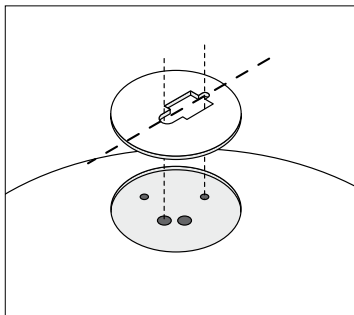

Place the inlay into the recess.


Align the cover plate as shown so that the recesses in the inlay are positioned exactly above the drill holes in the base plate.

Assembly, right alignment

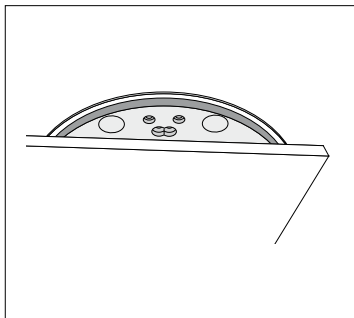

Assembly with fixed base


To assemble the lamp, place the lamp base on the table in a position where the mounting holes remain accessible from underneath.

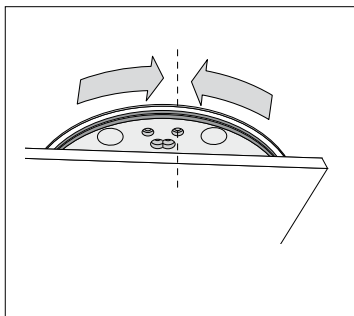

Assembly with swivel base


To assemble the lamp, place the lamp base on the table in a position where the mounting holes remain accessible from underneath.

Adjust the swivel base so that the drill holes are positioned one above the other.

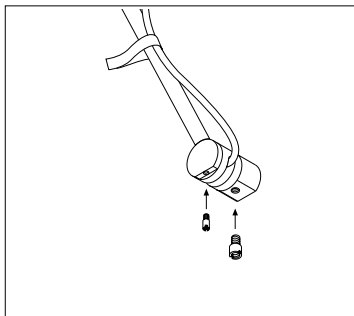


Use a screwdriver to screw the enclosed threaded sleeves into the joint and tighten firmly.

Assembly, right alignment

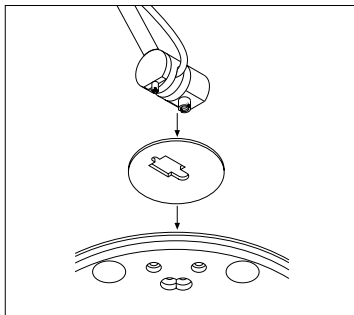


Insert the lamp into the base plate by inserting both threaded sleeves through the recesses in the inlay and into the holes in the base plate.

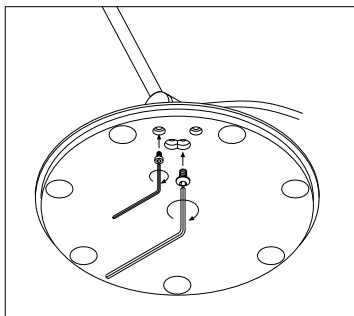

Screw in and tighten the M5 socket button-head and M3 socket cheese-head screws.


Remove the adhesive tape used for securing the cable.

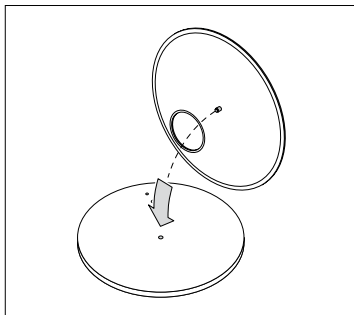


Caution

Before fitting, disconnect all current-carrying lines from the mains supply.

Lay the magnetic cover plate on the base plate using the centring aid.

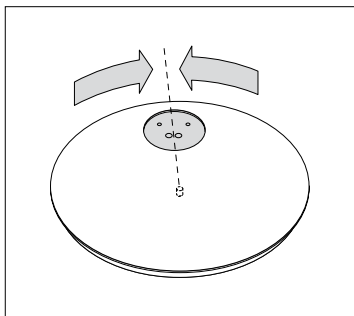


Turn the cover plate on the base plate until the cut-out for the inlay is positioned symmetrically over the assembly holes.

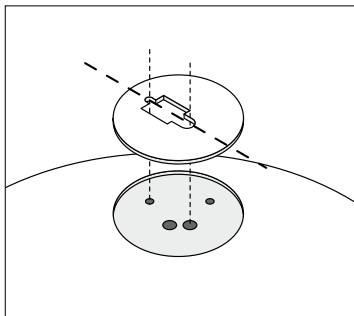

Place the inlay into the recess.


Align the cover plate as shown so that the recesses in the inlay are positioned exactly above the drill holes in the base plate.

Assembly, left alignment

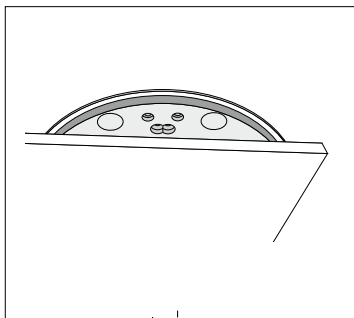

Assembly with fixed base


To assemble the lamp, place the lamp base on the table in a position where the mounting holes remain accessible from underneath.

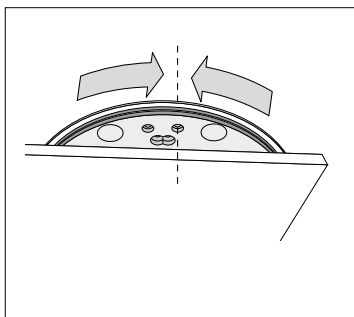

Assembly with swivel base


To assemble the lamp, place the lamp base on the table in a position where the mounting holes remain accessible from underneath.

Adjust the swivel base so that the drill holes are positioned one above the other.

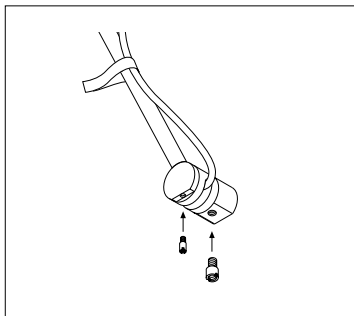


Use a screwdriver to screw the enclosed threaded sleeves into the joint and tighten firmly.

Assembly, left alignment


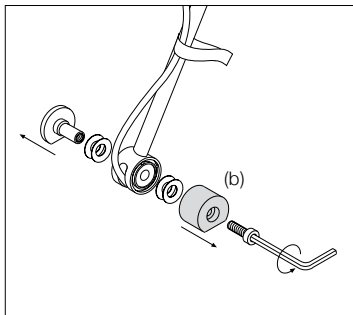


Use the Allen screw to unscrew the joint of the lamp stem as shown.

Change the position of the stop pins in the fixing cylinder (b) as shown in the diagram.

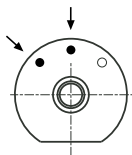


Right alignment
(when first delivered)

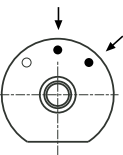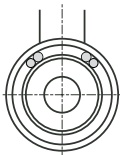


Left alignment


● inserted pin

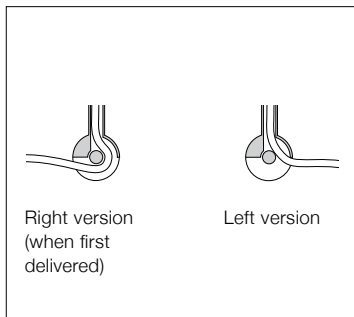

Guide the lamp body cable to the other side.

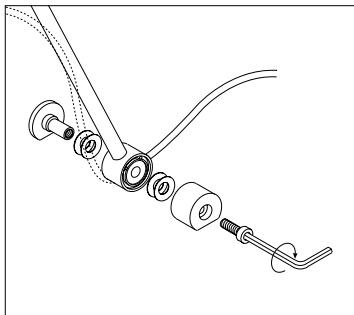


Assemble the joint as shown in the diagram and screw together, ...

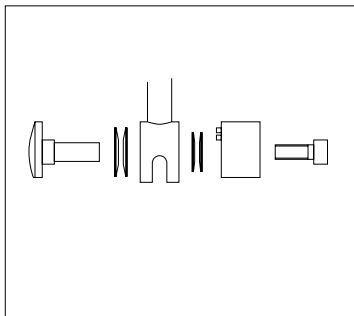


... paying attention to the correct order of the spring couples as you do so.

Assembly, left alignment

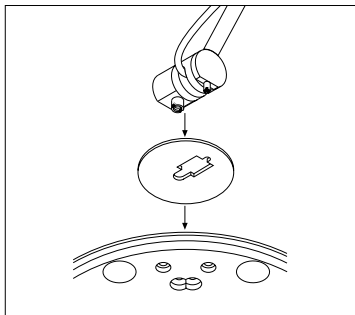


Insert the lamp into the base plate by inserting both threaded sleeves through the recesses in the inlay and into the holes in the base plate.

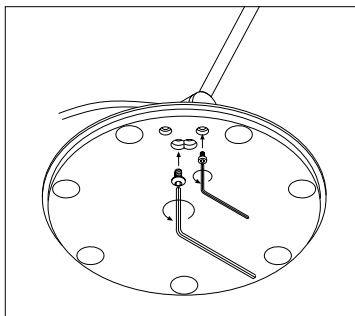

Screw in and tighten the M5 socket button-head and M3 socket cheese-head screws.

Remove the adhesive tape used for securing the cable.


Adjusting the lamp

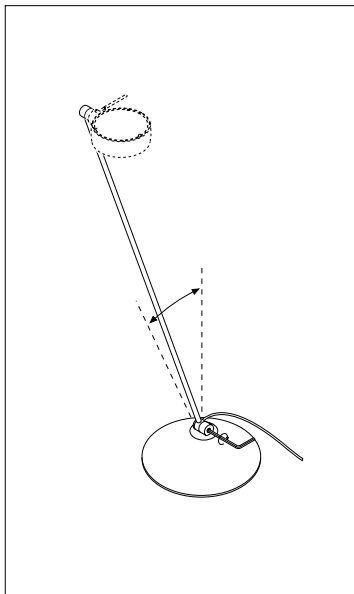

The lamp stem can be swivelled forwards and backwards from its vertical position. The stop position is fixed.

The ease of movement can be adjusted by the screw in the joint using the enclosed Allen key.

Pivoting range: approx. 45°

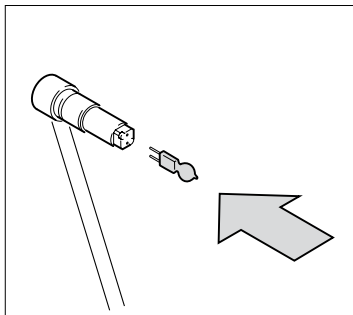


Caution

Before fitting, disconnect all current-carrying lines from the mains supply. Allow reflector heads to cool.

Fit the low-voltage halogen bulb into the Gy 6.35 pin socket.

Always use a soft cloth when handling the bulb glass. Never touch it with bare hands.

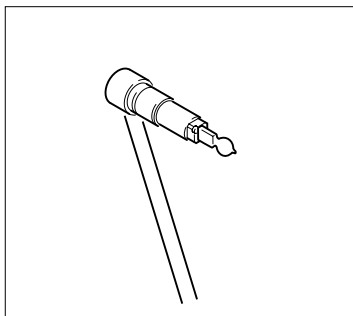

Use a soft cloth to wipe off any finger prints left on the bulb before switching the lamp on.

Fitting/replacing the reflector head




Fitting the reflector head is described separately in the enclosed instructions for the respective reflector head.

Replacing the bulb











Replacing the bulb is described separately in the enclosed instructions for the respective reflector head.

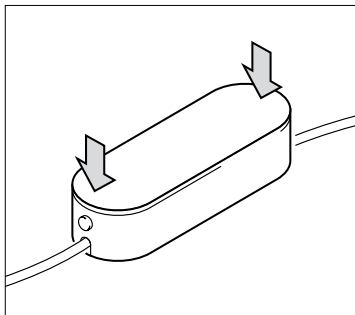

Occhio controller when first delivered:
Switch and dimmer function via
rocker button.

A short actuation of the rocker button
switches the lamp on and off.
Prolonged actuation of the rocker button
continuously brightens and dims the
lamp.

An overview of the different setup options
for the Occhio controller can be found on
the following pages.

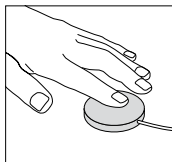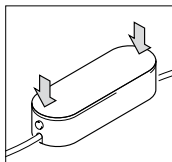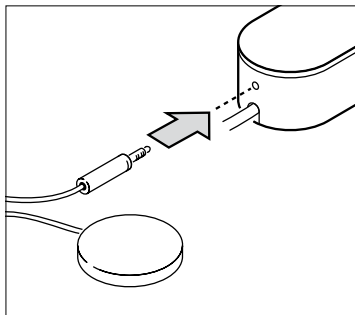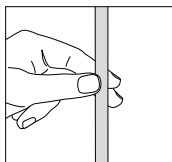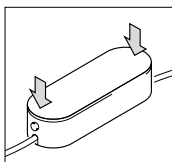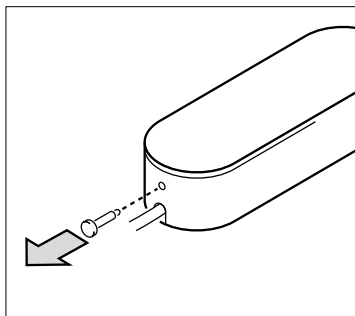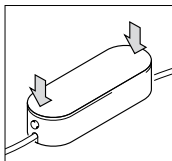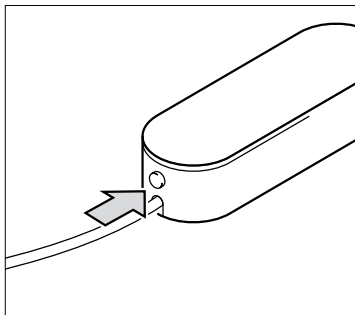

Controller with pin inserted:

Switch and dimmer function only via rocker button.

**To avoid electronic faults:
Disconnect the lamp from the
mains before removing the
pin or sensor pad.**

Controller with pin removed:

Switch and dimmer function via the rocker button and by touching the metal surface on the lamp body.

Controller with sensor pad plugged in:

Switch and dimmer function via the rocker button and by touching the sensor pad.

The plastic used for the non-slip surface can, in rare cases, react with the surfaces of furniture – in particular when cleaning agents or care products are used
(see Safety precautions).

A short actuation of the rocker button switches the lamp on and off. Prolonged actuation of the rocker button continuously brightens and dims the lamp.

Touching the lamp body briefly or pushing the rocker button switches the lamp on and off.

Touching the lamp body for a longer time or pushing the rocker button produces infinitely variable brightening or dimming of the lamp.



Caution: Never touch the reflector head while it is hot. Only handle the middle or bottom part of the lamp stem.

Touching the sensor pad briefly or pushing the rocker button switches the lamp on and off.

Touching the sensor pad for a longer time or pushing the rocker button produces infinitely variable brightening or dimming of the lamp.

Sensor dimming

The functionality of the sensor dimmer can sometimes be adversely affected by voltage fluctuations, interference from mains frequencies in the power supply or by too efficient an insulation of the user against earth.

Possible remedy:

- Turn the mains plug through 180° and plug it into the socket.
- Deactivate the sensor function by inserting the plastic pin and control the lamp via the controller.

Care

For cleaning both the metal and the glass parts of the lamp, we recommend using a glass cleaner.

Always allow the lamp to cool down before cleaning.

Information & contact

Your Occhio specialist retailer will gladly answer any other questions

www.occhio.com

info@occhio.com

Technical data

Item description:

Occhio tavolo NV 60/80

incl. Occhio controller

optionally incl. Occhio sensor pad

Stem length: 60/80 cm

Base diameter: 24 cm

Low-voltage halogen bulb:

12 V halogen, satinised/clear

Gy6.35 socket

Delivered with 60 W

low-voltage halogen IRC bulb

Bulb power:

max. 60 W

IP20  CE

Technical data, tavolo NV

tavolo 80 NV	max. 75 W NV halogen Gy 6.35, Occhio controller NV (touch dimmer) incl. 65 W IRC bulb, Height 80 cm	matt black matt chrome chrome bianco nero	7T 75 00 MS F 7T 75 00 MM F 7T 75 00 CC F 7T 75 00 CB F 7T 75 00 CN F
	Version with swivel base	matt black matt chrome chrome bianco nero	7T 75 00 MS T 7T 75 00 MM T 7T 75 00 CC T 7T 75 00 CB T 7T 75 00 CN T
tavolo 60 NV	max. 75 W NV halogen Gy 6.35, Occhio controller NV (touch dimmer) incl. 65 W IRC bulb, Height 125 cm	matt black matt chrome chrome bianco nero	7T 74 00 MS F 7T 74 00 MM F 7T 74 00 CC F 7T 74 00 CB F 7T 74 00 CN F
	Version with swivel base	matt black matt chrome chrome bianco nero	7T 74 00 MS T 7T 74 00 MM T 7T 74 00 CC T 7T 74 00 CB T 7T 74 00 CN T
Occhio sensor pad (optional)	can be connected to Oc- chio controller NV, dia. 45 mm, cable length 180 cm	matt chrome chrome	7L 70 01 M 7L 70 01 C

Bulb

Low-voltage halogen ECO Gy6.35



50 W	5G 00 50 C
60 W	5G 00 60 C

Occhio

Occhio GmbH
Wiener Platz 7
D 81667 München
Fon +49-89-44 77 86 30
Fax +49-89-44 77 86 39
info@occhio.com
www.occhio.com

