


Occhio

sospeso NV


Montageanleitung
mounting instructions



Occhio

sospeso NV

Montageanleitung S.2
mounting instructions p. 21





Die Montage von Elektrokomponenten darf nur von qualifiziertem Fachpersonal durchgeführt werden!

Vor den Arbeiten an der Leuchte diese unbedingt vom Netz trennen!



Den Sicherheitsabstand zu brennbaren Objekten einhalten!

Vor dem Wechsel des Reflektorkopfes, des Reflektors und des Leuchtmittels, Leuchte ausschalten und abkühlen lassen.

Vorsicht, Verbrennungsgefahr!

Niemals den heißen Reflektorkopf, nur den Leuchtenarm im mittleren oder unteren Bereich berühren!

Reparaturarbeiten dürfen nur von autorisiertem Fachpersonal oder dem Hersteller durchgeführt werden.

Produktbeschreibung

Occhio sospeso NV ist eine Niedervolt-Halogen-Leuchte der Schutzklasse 2. Die Leuchte wird wahlweise mit verschiedenen Reflektorköpfen ausgeliefert.


Inhalt


- 3 Produktbeschreibung
- 4 Aufbau
- 5 Montagemöglichkeiten
- 6 Montage mit Hohlraum-/Einputzdose
- 8 Montage mit Aufbaudose
- 11 Montage mit Baldachin und Kabel
- 15 Leuchtmittel einsetzen
- 16 Reflektorkopf aufsetzen/wechseln
- 16 Leuchtmittel wechseln
- 17 Pflegehinweise
- 17 Info & Kontakt
- 18 Technische Daten
- 19 Leuchtmittel

Leuchtenkörper

Kabelhülse


Reflektorkopf

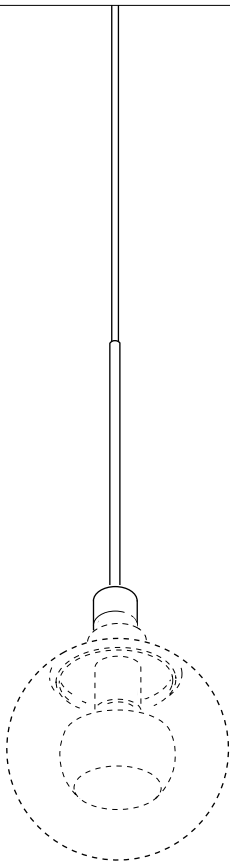

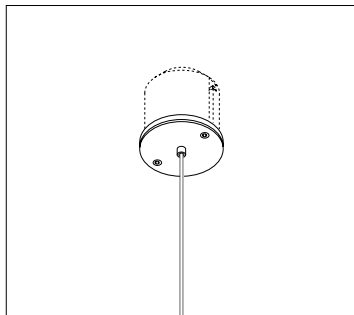


Hohlraum-/Einputzdose

Die sospeso Version mit flacher Dose und Deckel für direkten Kabeleinlass, ermöglicht die direkte Montage auf einer Deckeneinplatz oder Hohlraumdose.

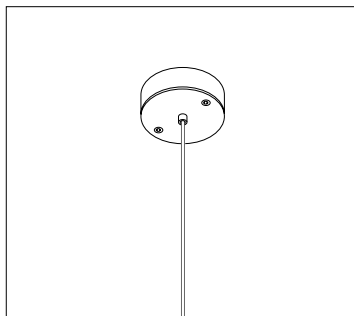


Aufbaudose

Mit der Aufbaudose und dem Deckel für direkten Kabeleinlass ist die Montage auf festen Decken möglich.

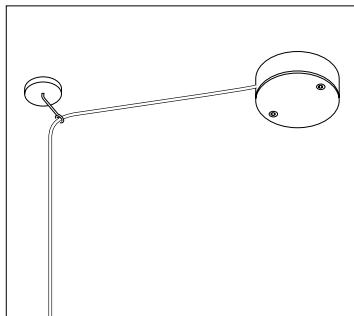


Baldachin und Kabel

Das Zubehörset Baldachin und Kabelumlenkung erlaubt die Montage einer oder mehrerer Leuchten neben einem Deckenanschluss.

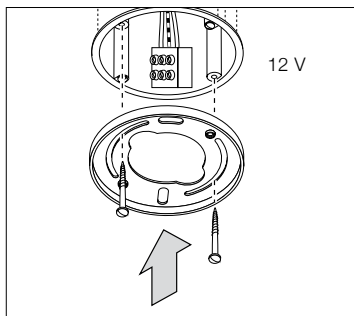


Achtung!
Vor der Montage alle stromführenden Leitungen vom Stromnetz trennen!

Flache Dose auf Hohlraum-Einputzdose aufschrauben. So drehen, dass die Leuchte die gewünschte Ausrichtung besitzt.

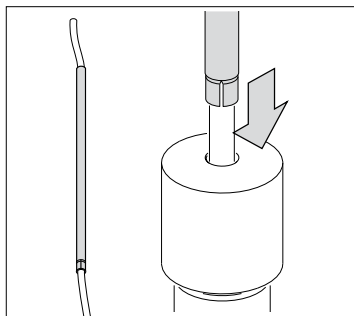


Kabelhülse auf das Leuchtenanschlusskabel schieben und den Federring in den Fassungshalter einstecken.

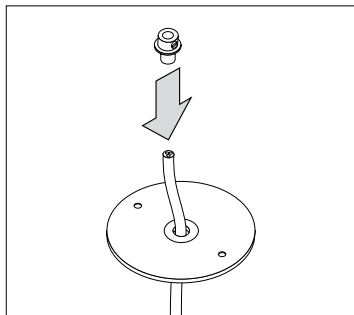


Leuchtenanschlusskabel durch Deckel und Zugentlastung führen. Gewünschte Höhe der Leuchtenabhängung einstellen und Schraube in der Zugentlastung festziehen.


Dann überstehende Kabel auf ca. 8 cm kürzen.

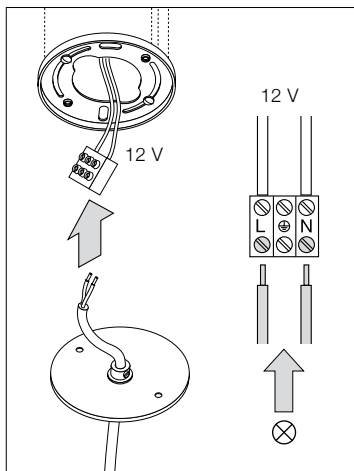

Kabelenden abisolieren und mit Aderendhülsen versehen. Phase und Nullleiter nach Schema anschließen.

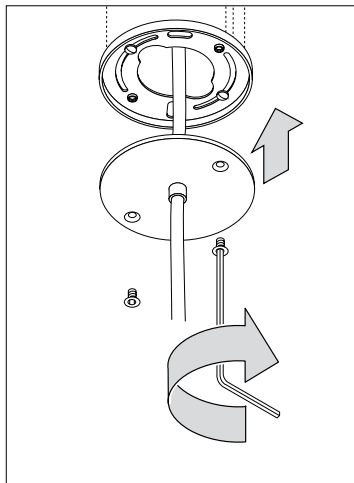

Deckel auf flache Dose aufsetzen und mit mitgelieferten Inbusschrauben anschrauben.

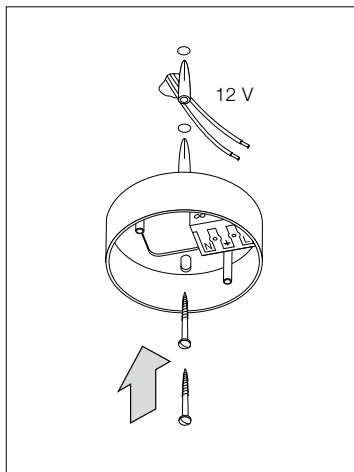


Achtung!
Vor der Montage alle stromführenden Leitungen vom Stromnetz trennen!


Aufbaudose über den Stromauslass an der Decke setzen und so drehen, dass die Leuchte die gewünschte Ausrichtung hat. Positionen der Bohrlöcher durch die Befestigungsschlitze anzeichnen.

Auf den Verlauf der Zuleitung in der Decke achten!


Zwei Löcher $\varnothing 6$ mm bohren, Dübel bündig einsetzen und Dose anschrauben.

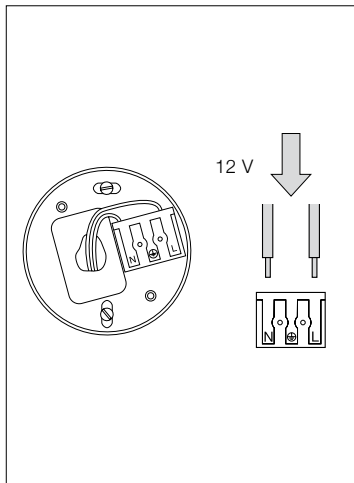

Die Kabelenden der Leitung an der Klemme der Aufbaudose nach Schema anschließen.

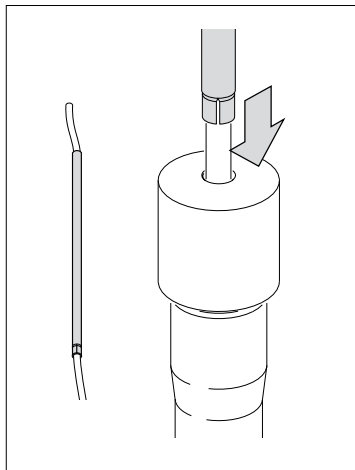


Kabelhülse auf das Leuchtenanschlusskabel schieben und den Federring in den Fassungshalter einstecken.

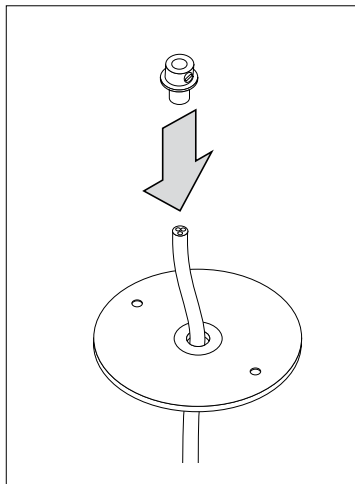


Leuchtenanschlusskabel durch Deckel und Zugentlastung führen. Gewünschte Höhe der Leuchtenabhängung einstellen und Schraube in der Zugentlastung festziehen.


Das überstehende Kabel auf ca. 8 cm kürzen.

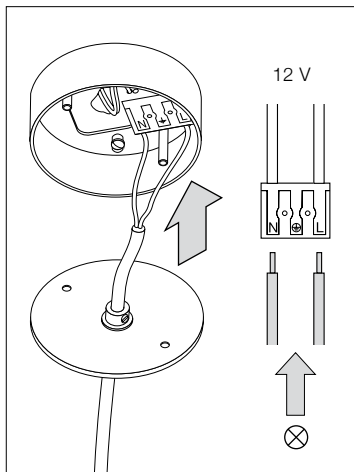

Kabelenden abisolieren und mit Aderendhülsen versehen. Nach Schema an die Klemme anschließen.

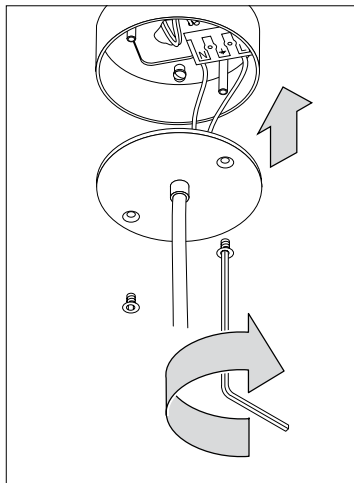


Deckel auf die Aufbaudose aufsetzen und anschrauben.

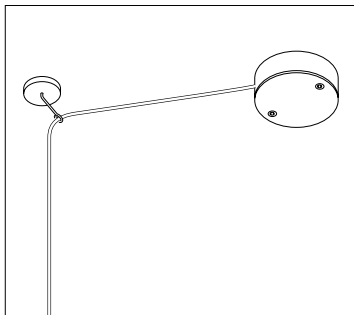


Achtung!
Vor der Montage alle stromführenden Leitungen vom Stromnetz trennen!


Die Kabelumlenkung an die gewählte Position an der Decke setzen und die Bohrung anzeichnen. Dabei auf den Verlauf der Zuleitung in der Decke achten!

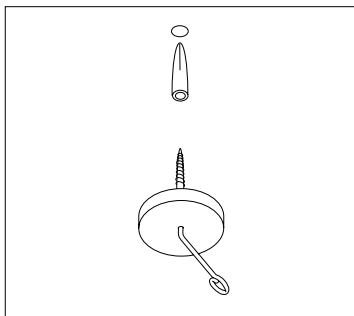

Loch $\varnothing$ 6 mm bohren und Dübel bündig einsetzen.

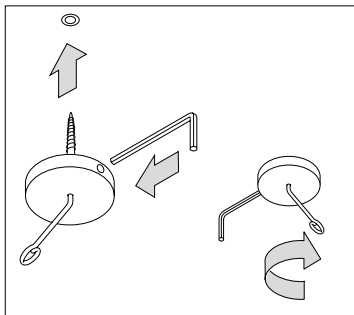

Beiliegenden Imbusschlüssel in das Montageloch der Kabelumlenkung stecken und mit diesem die Kabelumlenkung einschrauben.

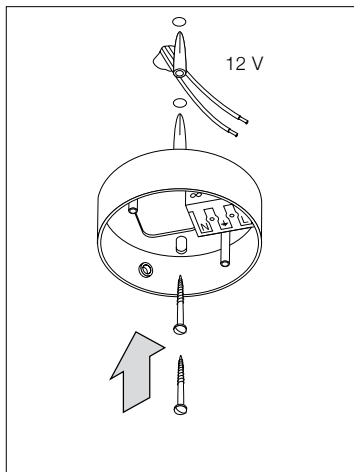


Aufbaudose über den Stromauslass an der Decke setzen und so drehen, dass die Kabelauslass die gewünschte Ausrichtung hat.


Positionen der Bohrlöcher durch die Befestigungsschlitze anzeichnen.

Auf den Verlauf der Zuleitung in der Decke achten!


Zwei Löcher $\varnothing 6$ mm bohren, Dübel bündig einsetzen und Dose anschrauben.

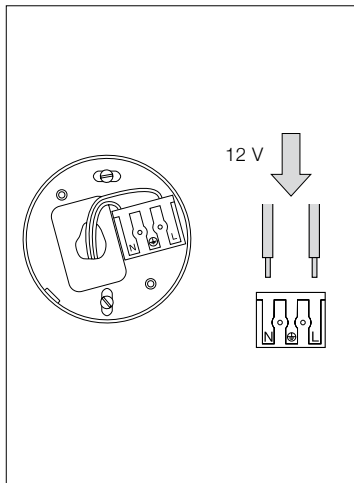


Die Kabelenden der Netzleitung an der Klemme der Aufbaudose nach Schema anschließen.

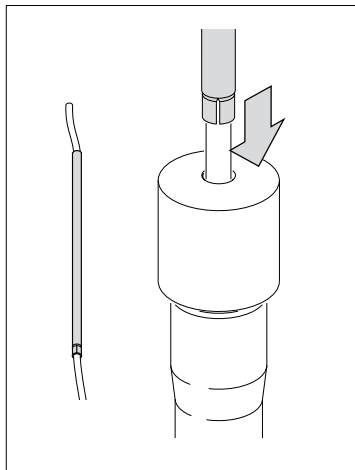

Kabelhülse auf das Leuchtenanschlusskabel schieben und den Federring in den Fassungshalter einstecken.

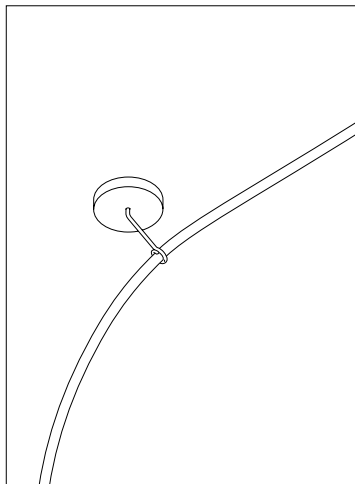


Anschlusskabel durch Öse in Kabelumlenkung ziehen und bis zur Aufbaudose führen.

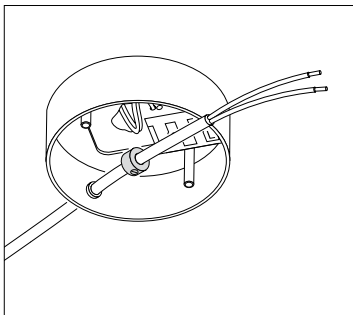


Leuchtenanschlusskabel durch Tülle führen.


Die gewünschte Höhe der Leuchtenabhängung einstellen und die Schraube in der Zugentlastung festziehen. Dann das überstehende Kabel auf ca. 8 cm kürzen.

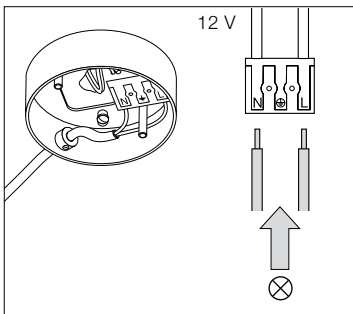

Kabelenden abisolieren und mit Aderendhülsen versehen. Leuchte und Erdung des Deckels nach Schema an die Klemme anschließen.

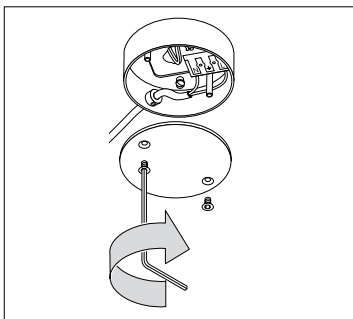

Deckel auf die Aufbaudose aufsetzen und anschrauben.

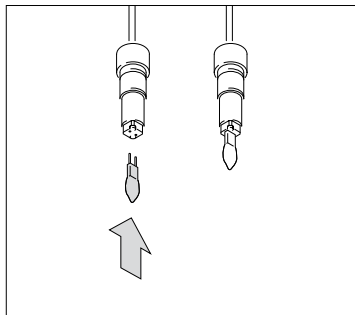

Achtung!

**Vor der Montage alle stromführenden Leitungen vom Stromnetz trennen!
Reflektorköpfe abkühlen lassen!**

Niedervolthalogen Leuchtmittel
(max. 60W) in die Gy 6.35 Stiftfassung
setzen.

Den Glaskolben des Leuchtmittels nur mit
einem weichen Tuch, nicht mit der bloßen
Hand anfassen.

Fingerabdrücke auf dem Leuchtmittel vor
dem Einschalten der Leuchte mit einem
weichen Tuch abwischen.

Reflektorkopf aufsetzen/wechseln



Die Montage des Reflektorkopfes wird in der getrennt beiliegenden Anleitung zum entsprechenden Reflektorkopf beschrieben.

Leuchtmittel wechseln



Das Wechseln des Leuchtmittels wird in der getrennt beiliegenden Anleitung zum entsprechenden Reflektorkopf beschrieben.

Pflegehinweise

Zur Reinigung der Metall- als auch der Glasteile der Leuchte empfehlen wir die Verwendung eines Glasreinigers.

Für die Reinigung des Divo-Glases empfehlen wir die Verwendung des beiliegenden Reinigungstuchs.

Leuchte nur in abgekühltem Zustand reinigen!

Info & Kontakt

Weitere Fragen beantwortet gerne Ihr Occhio Fachhändler

www.occhio.com
info@occhio.com

Technische Daten

Artikelbezeichnung
Occhio sospeso NV

exkl. Leuchtmittel, exkl. Montagedose
Kabellänge 2 m

NV	chrom matt	7E 35 00 M
	chrom	7E 35 00 C

Version ohne Anbringungsplatte

NV	chrom matt	7E 31 00 M
	chrom	7E 31 00 C

empfohlenes Niedervolt-Halogen
Leuchtmittel 12V:
max. 60 W
Sockel Gy6.35

Technische und gestalterische Änderungen vorbehalten

IP20   

Leuchtmittel

Niedervolt-Halogen
ECO Gy6.35



50 W

5G 00 50 C


60 W

5G 00 60 C

Occhio

sospeso NV

Instructions



Safety precautions



The assembly and installation of electrical components must be carried out only by qualified personnel.

Before working on the light, always disconnect it from the mains.



Maintain the minimum safety distance from flammable materials.

Before changing the reflector head, reflector and light source, switch off the light and allow it to cool down.

Caution, risk of burns.

Never touch the reflector head while it is hot. Only handle the middle or bottom part of the light arm.

Repairs must be carried out only by authorised, qualified personnel or the manufacturer.


Product description

The Occhio sogno NV is a safety class 2 low voltage halogen light.


The light is available with a choice of different reflector heads.

Contents

23	Product description
24	Configuration
25	Fitting options
26	Fitting with cavity/built-in socket
28	Fitting with cable socket
31	Fitting with baldachin and cable
35	Fitting the light source
36	Fitting/replacing the reflector head
36	Replacing the light source
37	Care instructions
37	Information & contact
38	Technical data
39	Bulbs

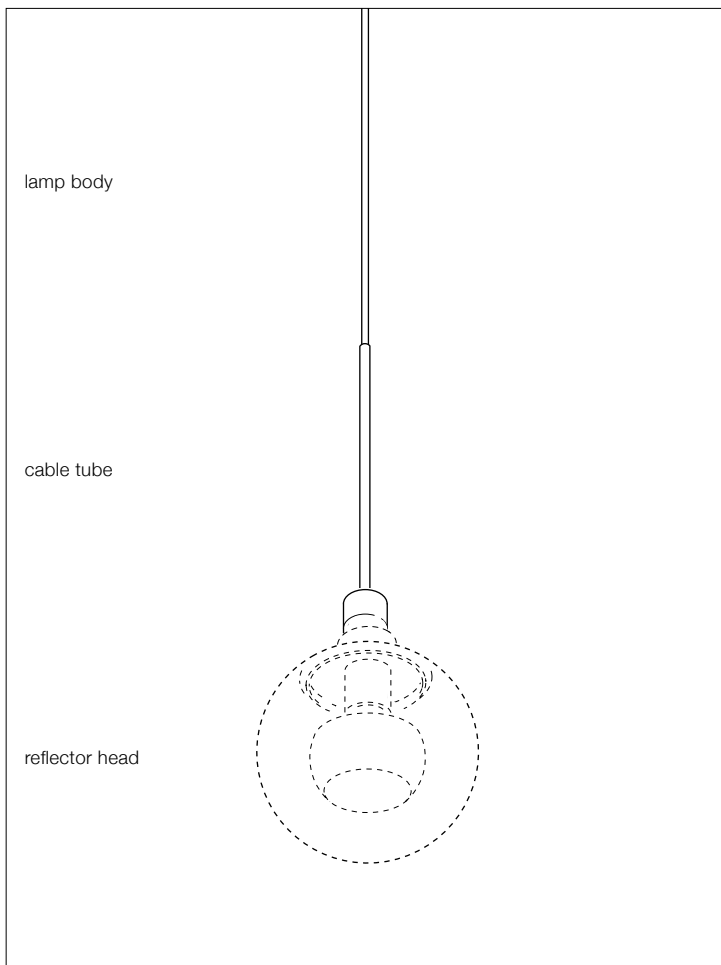


Fitting options

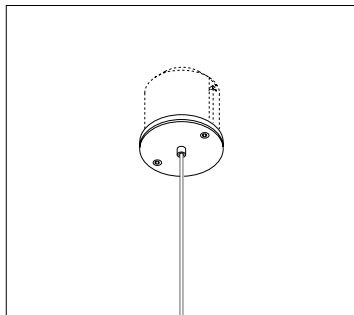


Flat box

The sospeso version with a flat box and cover plate for direct cable entry allows the lamp to be fitted directly on a built-in ceiling socket or a cavity socket.

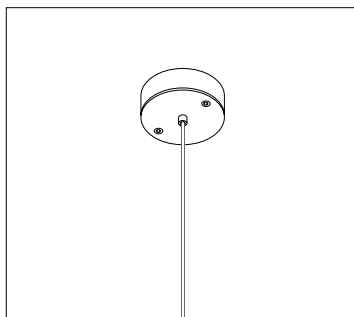


High box

Using the high box and cover plate for direct cable entry, it is possible to fit the lamp onto a solid ceiling.

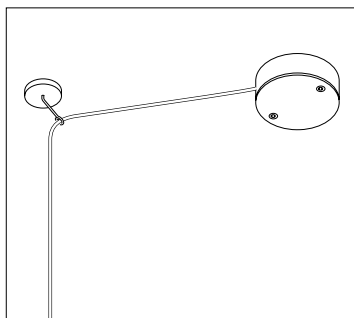

Canopy and cable re-direction


The baldachin and cable deflector accessory kit allows one or several lights to be fitted next to a ceiling connection.

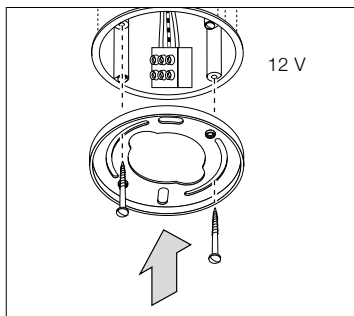


Caution

Before fitting, disconnect all current-carrying lines from the mains supply.

Screw the flat socket onto the cavity socket. Turn it until the light has the required alignment.

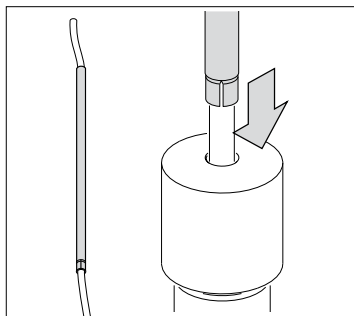


Guide the light connection cable through the cable tube and insert the snap ring into the socket holder until end position.

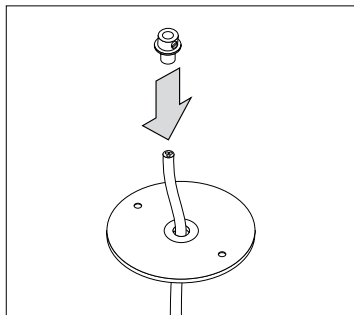


Guide the light connection cable through the cover plate and cord grip. Adjust the suspension of the light to the desired height and tighten the screw in the cord grip.


Then shorten the remaining cable to approx. 8 cm.

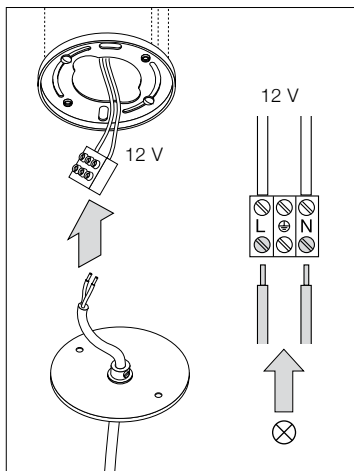

Strip the ends of the cable and fit them with wire terminations. Connect the phase and neutral conductor according to the wiring diagram.

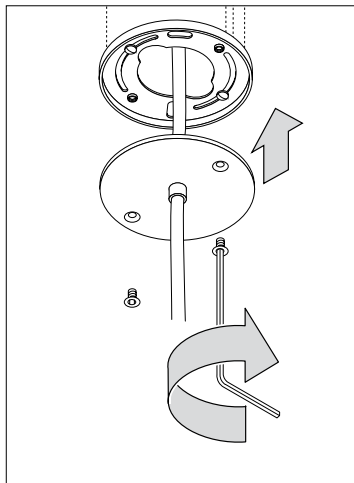

Fit the cover plate onto the flat socket and screw on with the Allen screws provided.

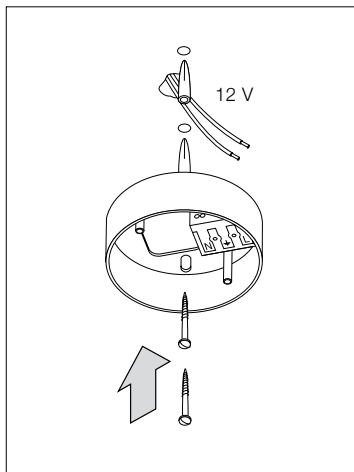


Caution

Before fitting, disconnect all current-carrying lines from the mains supply.

Place the cable socket over the power outlet cable and against the ceiling and turn it until the light has the required alignment. Mark the position of the drill holes through the fastening slots.

Check where the supply cable is routed in the ceiling.

Drill two 6 mm diameter holes, insert the wall plugs flush with the ceiling and screw on the socket.

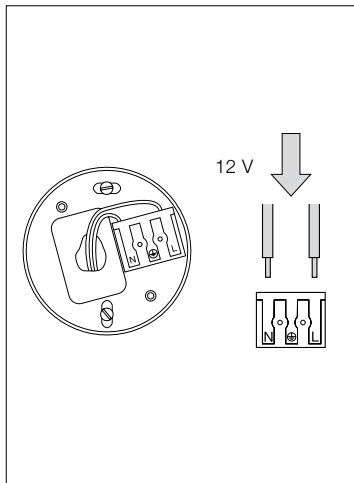


Connect the ends of the mains cable wires to the terminal block in the cable socket according to the wiring diagram.

Guide the light connection cable through the cable tube.


Guide the light connection cable through the cover plate and cord grip.

Adjust the suspension of the light to the desired height and tighten the screw in the cord grip.

Then shorten the remaining cable to approx. 8 cm.

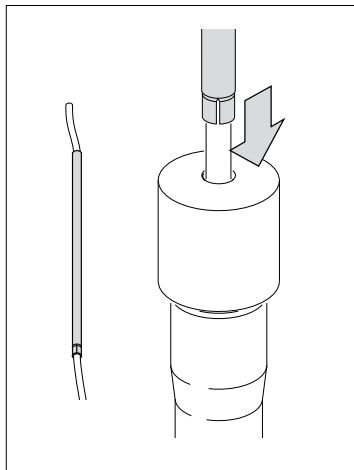


Guide the light connection cable through the cable tube and insert the snap ring into the socket holder until end position.

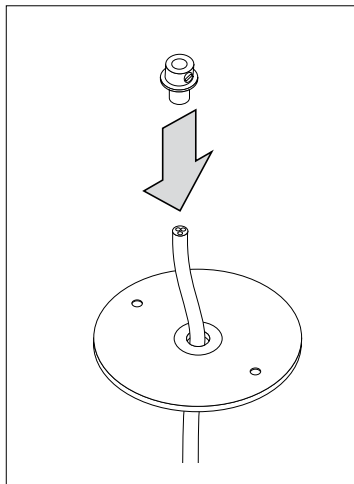


Guide the light connection cable through the cover plate and cord grip. Adjust the suspension of the light to the desired height and tighten the screw in the cord grip.


Then shorten the remaining cable to approx. 8 cm.

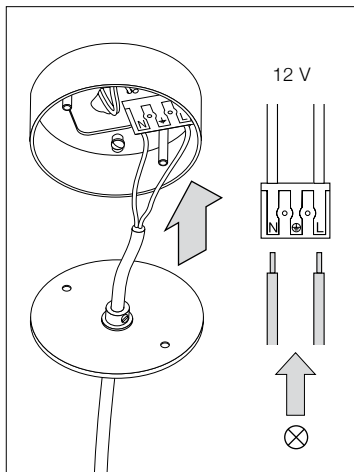

Strip the ends of the cable and fit them with wire terminations. Connect to the terminal block according to the wiring diagram.

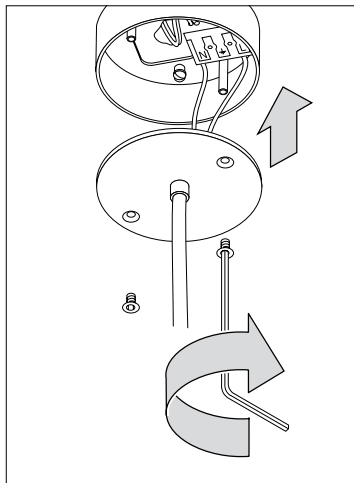


Fit the cover plate onto the cable socket and screw on.

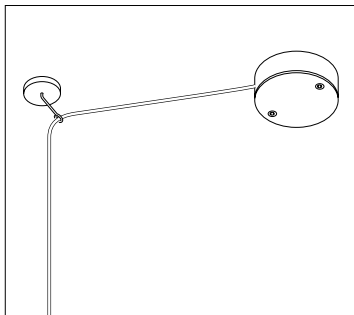


Caution

Before fitting, disconnect all current-carrying lines from the mains supply.


Place the cable deflector against the ceiling in the desired position and mark the drill hole. At the same time, check where the supply cable is routed in the ceiling.

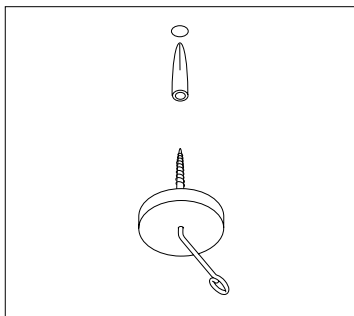

Drill a 6 mm diameter hole and insert the wall plug flush with the ceiling.

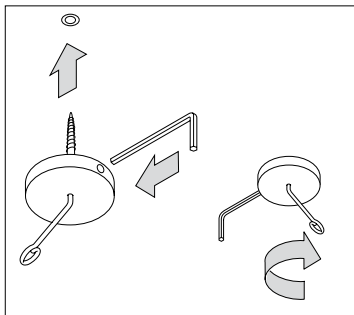

Insert the enclosed Allen key into the cable deflector fitting hole and, using the key, screw the cable deflector into the ceiling.

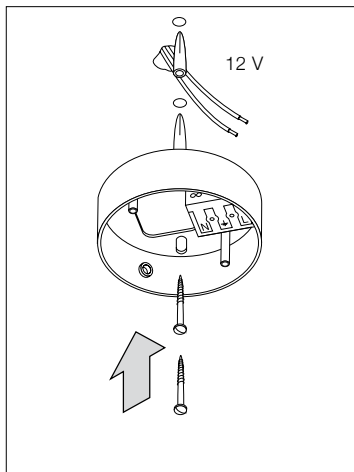


Place the cable socket over the power outlet cable and against the ceiling and turn it until the cable outlet has the required alignment.


Mark the position of the drill holes through the fixing slots.

Check where the supply cable is routed in the ceiling.


Drill two 6 mm diameter holes, insert the wall plugs flush with the ceiling and screw on the socket.

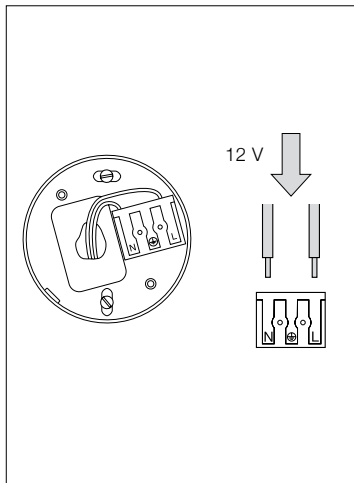


Connect the ends of the mains cable wires to the terminal block in the cable socket according to the wiring diagram.

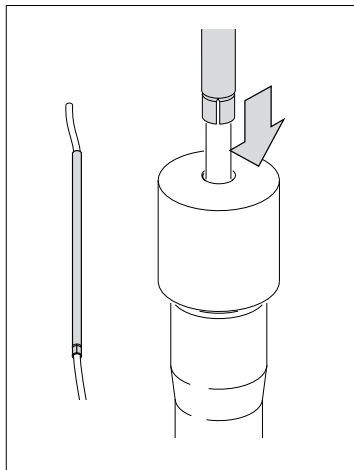


Guide the light connection cable through the cable tube and insert the snap ring into the socket holder until end position.

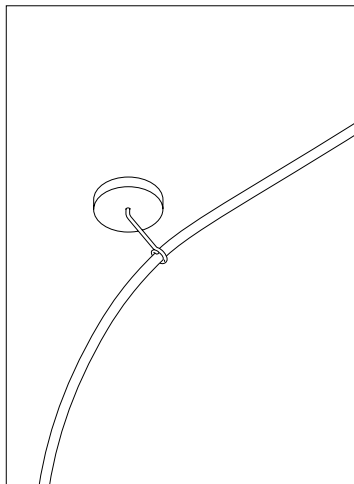


Pull the connection cable through the eye in the cable deflector and guide it across to the cable socket.

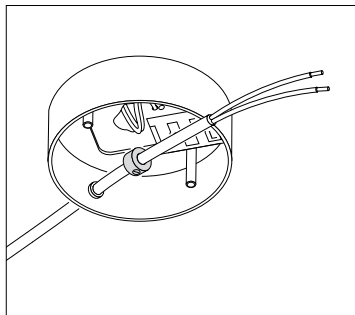


Guide the light connection cable through the grommet.
Adjust the suspension of the light to the desired height and tighten the screw in the cord grip. Then shorten the remaining cable to approx. 8 cm.

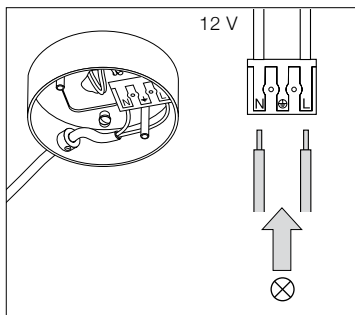

Strip the ends of the cable and fit them with wire terminations. Connect the light and cover plate earth to the terminal block according to the wiring diagram.

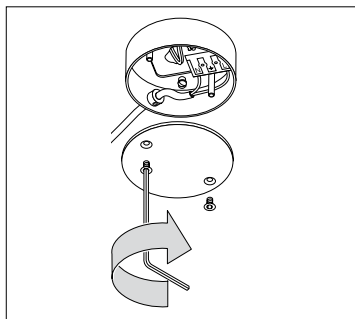

Fit the cover plate onto the cable socket and screw on.

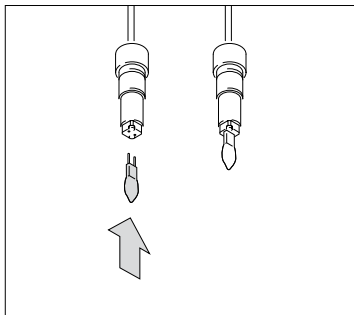

Caution

Before fitting, disconnect all current-carrying lines from the mains supply. Allow reflector heads to cool.

Insert a low voltage halogen light source (max. 60W) into the Gy 6.35 pin holder.

Always use a soft cloth when handling the bulb glass of the light source. Never touch it with bare hands.

Finger prints on the light source should be wiped off with a soft cloth before use.

Fitting/replacing the reflector head



Reflector head assembly is described separately in the enclosed instructions for the respective reflector head.

Replacing the light source



Replacing the light source is described separately in the enclosed instructions for the respective reflector head.

Care instructions

To clean glass and also the metal parts of the light, we recommend the use of a glass cleaner.

For cleaning the Divo glass, we recommend the use of the enclosed cleaning cloth.

Always allow the light to cool before cleaning.

Information & contact

Your Occhio specialist retailer will gladly deal with any other questions

www.occhio.com
info@occhio.com

Technical data

Product description

Occhio sospeso NV

excl. light source, excl. mounting socket

Cable length 2 m

NV	matt chrome	7E 35 00 M
	chrome	7E 35 00 C

Version without mounting plate

NV	matt chrome	7E 31 00 M
	chrome	7E 31 00 C

Recommended low voltage halogen

light source 12V:

max. 60W

Base Gy 6.35

Subject to technical and design
modifications without notice

IP20   

Bulbs

Low voltage halogen
ECO Gy6.35



50 W
60 W

5G 00 50 C
5G 00 60 C

Occhio

Occhio GmbH
Wiener Platz 7
D 81667 München
Fon +49-89-44 77 86 30
Fax +49-89-44 77 86 39
info@occhio.com
www.occhio.com

