
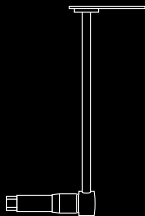


Occhio



faro NV

Montageanleitung
mounting instructions

singolo




doppio

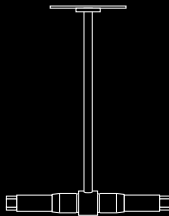

faro NV

Montageanleitung S.2
mounting instructions p. 13

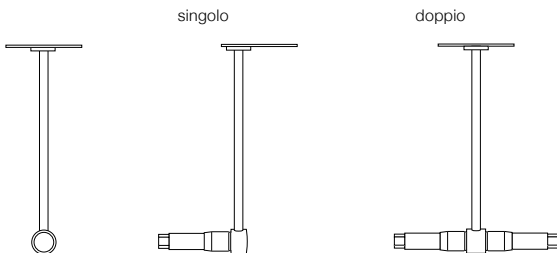



Die Montage von Elektrokomponenten darf nur von qualifiziertem Fachpersonal durchgeführt werden!

Vor den Arbeiten an der Leuchte diese unbedingt vom Netz trennen!



Den Sicherheitsabstand zu brennbaren Objekten einhalten!

Vor dem Wechsel des Reflektorkopfes, des Reflektors und des Leuchtmittels, Leuchte ausschalten und abkühlen lassen.

Vorsicht, Verbrennungsgefahr!

Niemals den heißen Reflektorkopf, nur den Leuchtenarm im mittleren oder unteren Bereich berühren!

Reparaturarbeiten dürfen nur von autorisiertem Fachpersonal oder dem Hersteller durchgeführt werden.

Produktbeschreibung

Occhio faro NV ist eine Niedervolt-Halogen-Leuchte der Schutzklasse 2. Die Leuchte wird wahlweise mit verschiedenen Reflektorköpfen ausgeliefert.


Inhalt


- 3 Produktbeschreibung
- 4 Aufbau
- 5 Montagemöglichkeiten
- 6 Montage auf Hohlraum-/Einputzdose
- 8 Reflektorkopf aufsetzen/wechseln
- 8 Leuchtmittel wechseln
- 9 Leuchte einstellen
- 9 Pflegehinweise
- 9 Info & Kontakt
- 10 Technische Daten
- 11 Technische Daten faro NV
- 11 Leuchtmittel

Deckenanbringung

Leuchtenkörper


Reflektorkopf

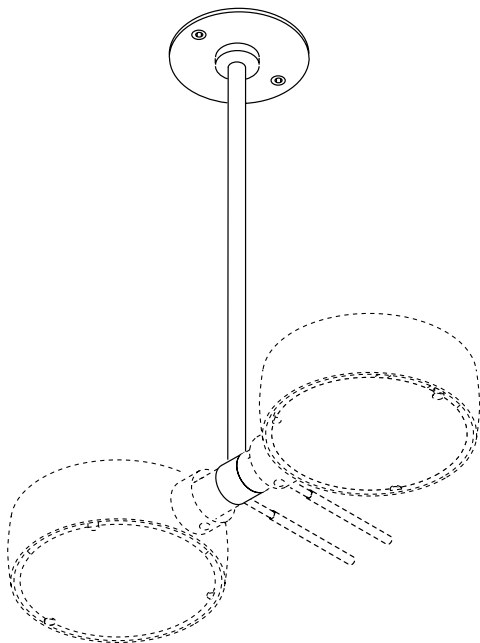

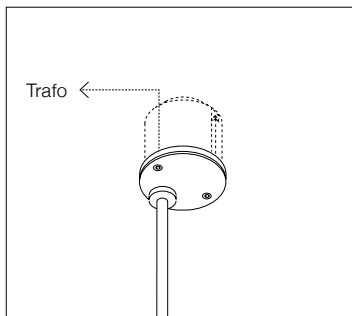

Hohlraum-/Einputzdose

Beim Anschluss an einen externen elektronischen Transformator (Trafo) kann die faro NV Leuchte mit flacher Montagebox direkt auf eine Einputzdose oder eine Hohlraumdose montiert werden.

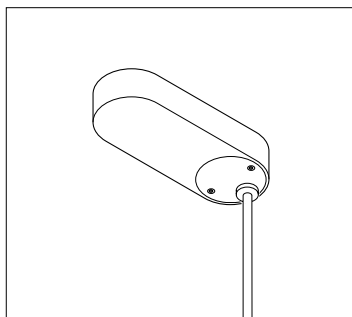


Aufbauversion

In der Aufbauversion wird die NV Leuchte auf ein entsprechendes NV Gehäuse montiert.



Die Montage wird in der jeweiligen Anleitung zum Gehäuse beschrieben.

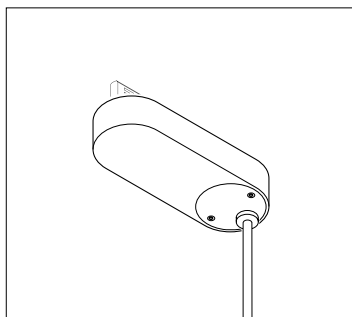


Track-Version

In der Track-Version wird die NV Leuchte auf ein entsprechendes NV Gehäuse mit Multi-Adapter zum Anschluss an EUTRAC-kompatible Stromschienen montiert.




Die Montage wird in der jeweiligen Anleitung zum Gehäuse beschrieben.

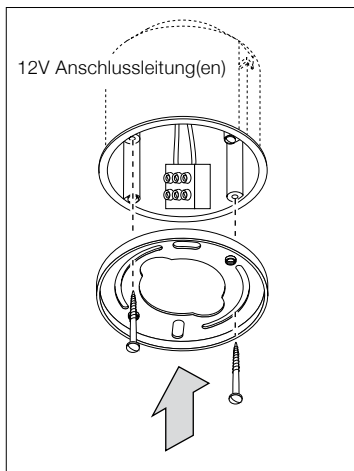

Achtung!
Vor der Montage alle stromführenden Leitungen vom Stromnetz trennen!


Flache Dose auf Hohlraum-Einputzdose aufschrauben.

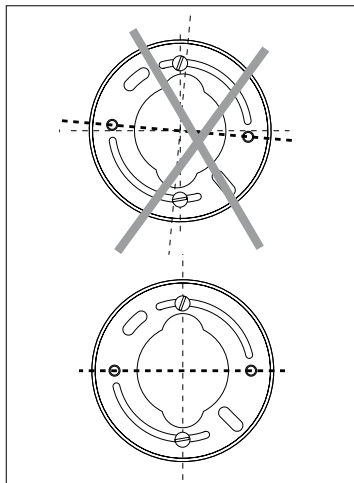

Gewindebohrungen zur Befestigung der Leuchte rechtwinklig zum Raum ausrichten.


singolo

Leitung zu
Trafo 12V




doppio

Leitung(en) zu
Trafo(s) 12V

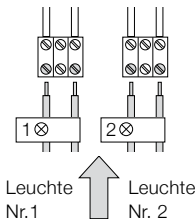


Trafo-Leistung(en) müssen auf die jeweilige Leuchte abgestimmt sein.
Doppio: Bei Anschluss beider Leuchten an einen Trafo ist auf entsprechende Ausgangsleistung zu achten!

Kabel des Leuchtenkörpers nach Schema an die Klemme(n) anschließen.
12V Anschlussleitung zum Trafo:
Querschnitt mindestens 1mm²
Leitungslänge maximal 2m.

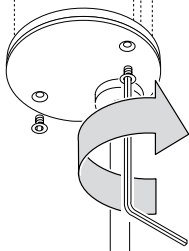

Leuchtenkörper auf Dose aufsetzen und mit mitgelieferten Inbusschrauben anschrauben.




230 V 12 V



Trafo

Auf korrekten Anschluss des Kabels am Trafo achten.


Leuchtmittel einsetzen

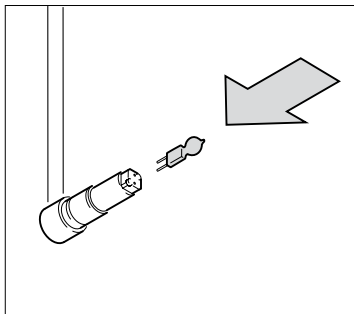

Achtung!
Vor der Montage alle stromführenden
Leitungen vom Stromnetz trennen!
Reflektorköpfe abkühlen lassen!

Niedervolthalogen Leuchtmittel in die Gy6.35 Stiftfassung setzen.

Den Glaskolben des Leuchtmittels nur mit einem weichen Tuch, nicht mit der bloßen Hand anfassen.

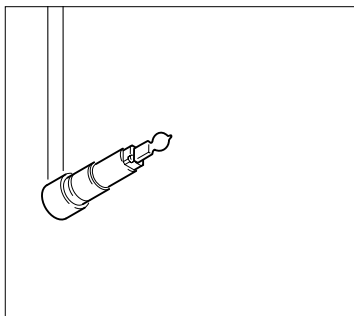

Fingerabdrücke auf dem Leuchtmittel vor dem Einschalten der Leuchte mit einem weichen Tuch abwischen.

Reflektorkopf aufsetzen/wechseln




Die Montage des Reflektorkopfes wird in der getrennt beiliegenden Anleitung zum entsprechenden Reflektorkopf beschrieben.

Leuchtmittel wechseln



Das Wechseln des Leuchtmittels wird in der getrennt beiliegenden Anleitung zum entsprechenden Reflektorkopf beschrieben.

Leuchte einstellen

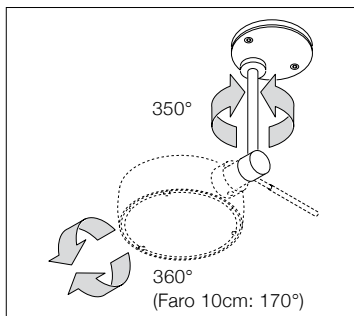

Die Leuchte ist um die senkrechte Achse von Anschlag zu Anschlag frei drehbar.

Der Reflektorkopf ist ohne Anschlag frei drehbar. Bei der Faro in 10 cm-Version ist die Drehbarkeit auf 170° beschränkt.

Pflegehinweise

Zur Reinigung der Metall- als auch der Glasteile der Leuchte empfehlen wir die Verwendung eines Glasreinigers.

Leuchte nur in abgekühltem Zustand reinigen!

Info & Kontakt

Weitere Fragen beantwortet gerne Ihr Occhio Fachhändler

www.occhio.com
info@occhio.com

Technische Daten

Artikelbezeichnung:
Occhio faro NV

Niedervolt-Halogen (IRC)
Gy6.35

max. 75 W

Die Leuchte lässt sich über Niedervolt-Halogen-geeignete Wandeinbaudimmer betreiben.

Technische und gestalterische Änderungen vorbehalten

IP 20   

Technische Daten faro NV

_ chrom matt M

_ chrom C

faro singolo	NV	10 cm	max. 75 W	7F 10 00 _
		20 cm	Niedervolt-Halogen Gy 6.35	7F 11 00 _
		30 cm	drehbar	7F 12 00 _
		60 cm		7F 14 00 _

_ chrom matt M

_ chrom C


faro doppio	NV	10 cm	max. 2 x 75 W	7F 20 00 _
		20 cm	Niedervolt-Halogen Gy 6.35	7F 21 00 _
		30 cm	drehbar	7F 22 00 _
		60 cm		7F 24 00 _

Leuchtmittel

Niedervolt-Halogen ECO Gy6.35		50 W	5G 00 50 C
		60 W	5G 00 60 C

faro NV

Montageanleitung S.2
mounting instructions p. 13

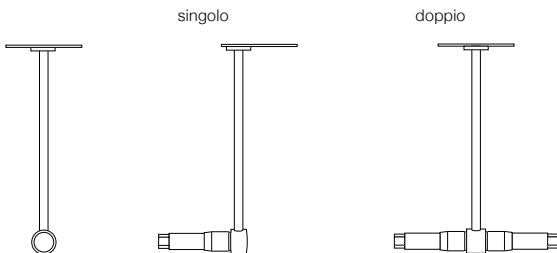


Safety precautions



The assembly and installation of electrical components must be carried out only by qualified personnel.

Before working on the lamp, always disconnect it from the mains.



Maintain the minimum safety distance from flammable materials.

Before changing the reflector head, the reflector or the bulb, switch off the lamp and allow it to cool down.

Caution, risk of burns.

Never touch the reflector head while it is hot. Only handle the middle or bottom part of the lamp stem.

Repairs must be carried out only by authorised, qualified personnel or the manufacturer.

Product description

Occhio faro NV is a low voltage halogen lamp, protection class 2. The lamp is available with a choice of different reflector heads.


Contents


15	Product description
16	Configuration
17	Mounting options
18	Fitting to a built-in/plastering box
20	Fitting/replacing the reflector head
20	Replacing the bulb
21	Adjusting the lamp
21	Care instructions
21	Information & contact
22	Technical data
23	Technical data, faro NV
23	Bulb

Ceiling attachment

Lamp body


Reflector head

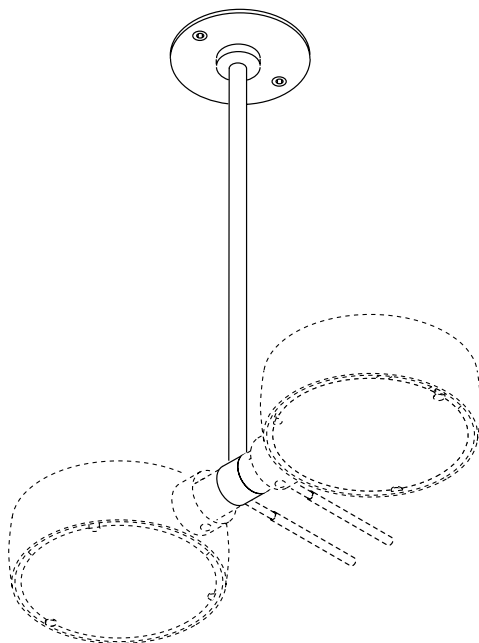

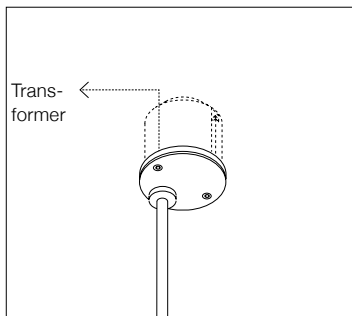

Plastering/built-in box

When connected to an external electronic transformer, the faro NV lamp with a flat mounting box can be mounted directly to a built-in box or a plastering box.

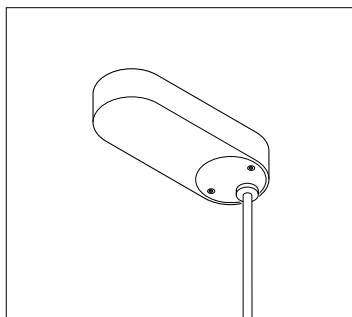


Surface-mount version

In the surface-mount version, the NV lamp is mounted on a corresponding NV housing.



The mounting procedure is described in the respective instructions for the housing.

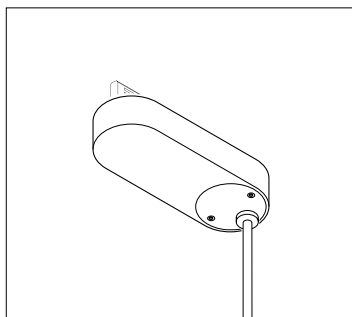

Track version

In the track version, the NV lamp is mounted on a corresponding NV housing with a multi-adapter for connecting to EUTRAC-compatible bus bars.





The mounting procedure is described in the respective instructions for the housing.




Caution

Before fitting, disconnect all current-carrying lines from the mains supply.

Screw the flat socket onto the built-in/plastering box.

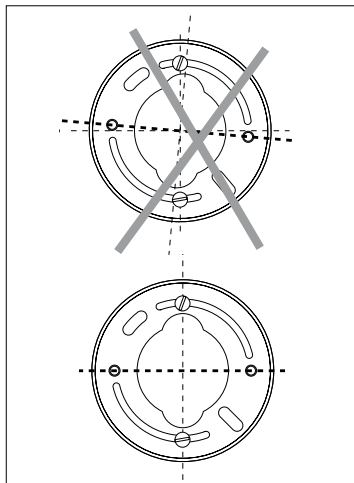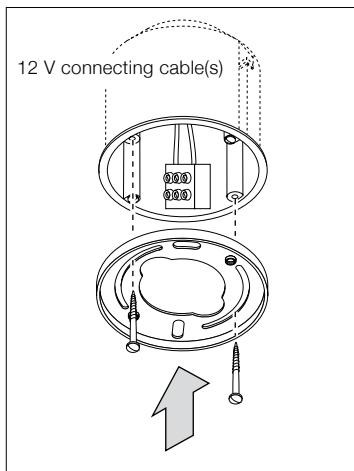


Align the tap holes for fixing the lamp in place perpendicular to the cavity.

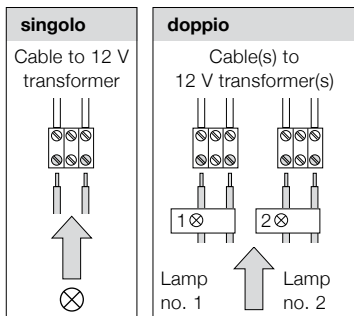


The transformer cable(s) must be compatible with each of the lamps.
Doppio: When connecting both lamps to a single transformer, the output rating must be observed.

Connect the cable for the lamp body to the terminal(s) as shown in the diagram.
 12 V connecting cable to the transformer:
 cross section at least 1 mm²
 maximum cable length: 2 m.

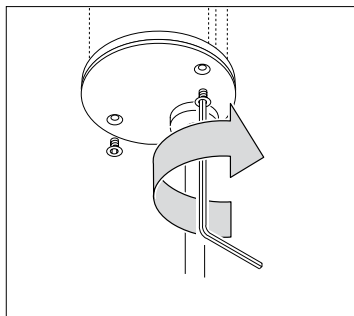


Fit the lamp body onto the socket and screw in place with the Allen screws provided.

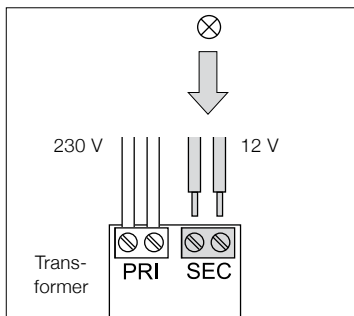

Make sure that the cable is properly connected to the transformer.

Fitting the bulb

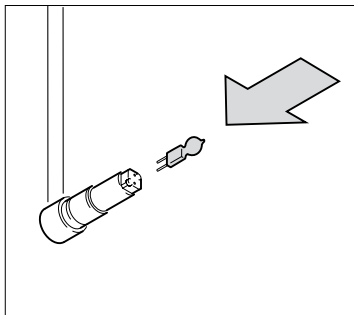


Caution

Before fitting, disconnect all current-carrying lines from the mains supply. Allow reflector heads to cool.

Fit the low-voltage halogen bulb into the Gy 6.35 pin socket.

Always use a soft cloth when handling the bulb glass. Never touch it with bare hands.

Use a soft cloth to wipe off any finger prints left on the bulb before switching the lamp on.

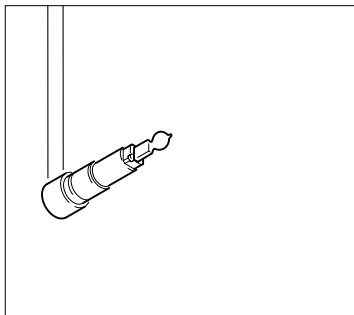

Fitting/replacing the reflector head




Reflector head assembly is described separately in the enclosed instructions for the respective reflector head.

Replacing the bulb



Replacing the bulb is described separately in the enclosed instructions for the respective reflector head.

Adjusting the lamp

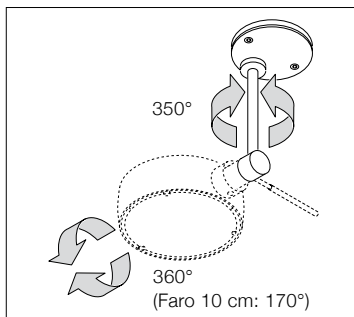

The lamp is rotatable around the vertical axis from limiter to limiter.

The reflector head does not have any limiters and can be freely rotated. The pivoting range of the Faro 10 cm version is limited to 170°.

Care instructions

To clean both the metal and the glass parts of the lamp, we recommend using a glass cleaner.

Always allow the lamp to cool down before cleaning.

Information & contact

Your Occhio specialist retailer will gladly answer any other questions

www.occhio.com
info@occhio.com

Technical data

Item description:
Occhio faro NV

Low-voltage halogen (IRC)
Gy6.35

max. 75 W

The lamp can be operated by built-in wall dimmers suitable for low voltage halogen bulbs.

Subject to technical and design modifications without notice

IP 20   

Technical data, faro NV

_ chrome matt M
_ chrome C

faro singolo	NV	10 cm	max. 75 W	7F 10 00 _
		20 cm	Low voltage halogen Gy 6.35	7F 11 00 _
		30 cm	turnable	7F 12 00 _
		60 cm		7F 14 00 _

_ chrome matt M
_ chrome C

faro doppio	NV	10 cm	max. 2 x 75 W	7F 20 00 _
		20 cm	Low voltage halogen Gy 6.35	7F 21 00 _
		30 cm	turnable	7F 22 00 _
		60 cm		7F 24 00 _

Bulb

**Low-voltage halogen
ECO Gy6.35**



50 W	5G 00 50 C
60 W	5G 00 60 C

Occhio

Occhio GmbH
Wiener Platz 7
D 81667 München
Fon +49-89-44 77 86 30
Fax +49-89-44 77 86 39
info@occhio.com
www.occhio.com

