



Cleaning instructions Luna

Using the example of Luna sospeso:

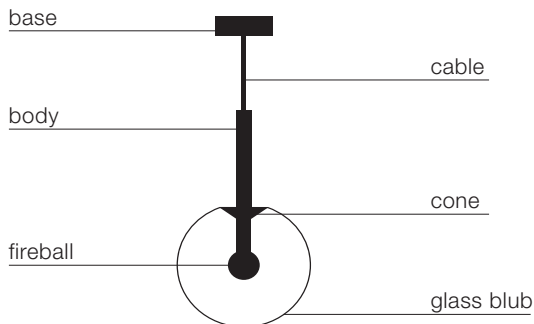


1. Cleaning tools

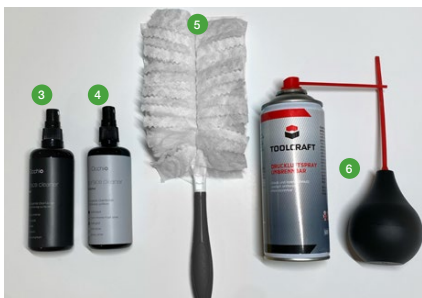

- 1 Occhio gloves with silicone nubs for better grip on the glass bulb (these are enclosed with the series — alternatively use comparable gloves from other manufacturers)
- 2 Occhio microfiber cloth tailored to Luna (enclosed with the series, alternatively use another high-quality microfiber cloth).
- 3 Occhio „surface cleaner intense“ for cleaning the luminaire, alternatively isopropyl alcohol from the pharmacy or IPA cleaner from Würth.
- 4 Occhio „surface cleaner sensitive“ for cleaning the cables and power supplies, alternatively the active foam cleaner from Würth.
- 5 Feather duster for dust removal on and in the glass bulb.
- 6 Compressed air spray or bellows for dust removal on the cone.

2. Outside cleaning

Note: Only clean Occhio luminaires when they are switched off and have cooled down to avoid residues sticking to the luminaire. Use gloves throughout disassembly, cleaning and assembly.

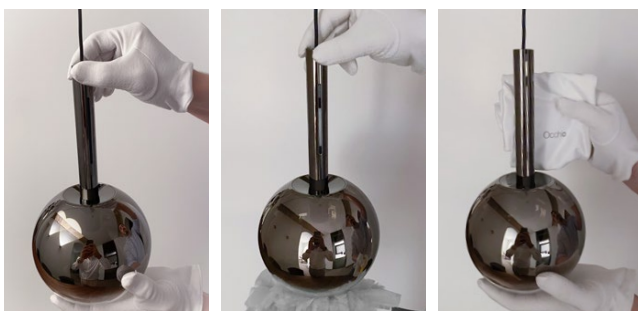


For easy dust and streak removal on the glass bulb, use the dry microfiber cloth and the feather duster.

For heavier dirt on the PVD coated surfaces, such as on the glass bulb, the body and the base, use the microfiber cloth with the Occhio „surface cleaner intense“.

Cables as well as lacquered power supplies can be cleaned with the Occhio „surface cleaner sensitive“.

3. Inside cleaning

Note: Only clean Occhio luminaires when they are switched off and have cooled down to avoid residues sticking to the luminaire. Use gloves throughout disassembly, cleaning and assembly.

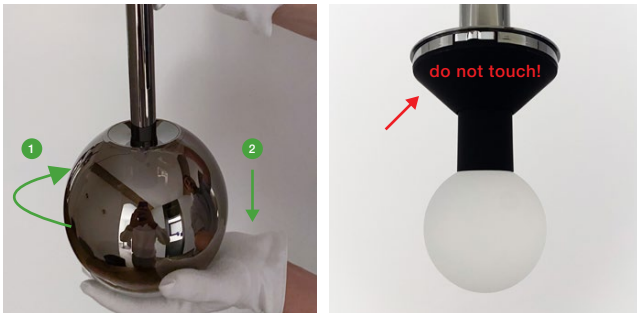


Turn the bulb counter-clockwise to open the bayonet **1**, so that the glass bulb can be removed carefully **2**.

Note: Be careful not to damage the surface of the cone in the process, as scratches on the surface are irreparable. The compressed air spray must not be held upside down during use.



Remove the dust inside the glass bulb with a feather duster. If streaks have formed, we recommend the microfiber cloth with the Occhio „surface cleaner intense“.

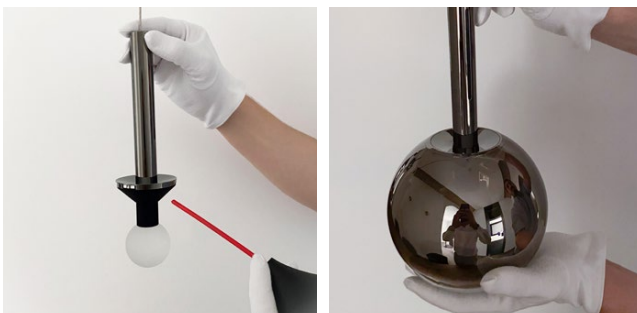

To remove the dust on the cone, use the compressed air spray or the bellows.

Note: Do not touch the cone or clean it with the microfiber cloth.

Immediately after cleaning, put the glass bulb back on the body and close the bayonet by turning it clockwise to prevent further dust formation inside the bulb.